



INSTRUCTION MANUAL

PROFESSIONAL ROTISSERIE

MAG 4 GAS
MAG 6 GAS
MAG 8 GAS



FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

MESURE DE SÉCURITÉ

Ne pas entreposer ni utiliser d'essence ni autres vapeurs ou liquides inflammables à proximité de cet appareil ou de tout autre appareil.

AVERTISSEMENT

L'installation, le réglage, la modification, la réparation ou l'entretien incorrect de cet appareil peut causer des dommages matériels, des blessures ou la mort. Lire attentivement les instructions d'installation, de fonctionnement et d'entretien avant de procéder à son installation ou son entretien.



Dear customer,

You just acquired a new rotisserie DOREGRILL.

Thank you for choosing our equipment. We continue to make the effort to make our product more reliable and more practical for the past 60 years.

We are always looking to improve our products and we tried to offer to our customers our knowledge and experience in order to meet your expectation by adding confort and safety

You will find a wide range of showcases and accesories that can be associated or integrated with your rotisserie.

In order to quickly start using this new equipment, we invite you to carefully read the instruction manual. This booklet will show you how to take advantage of all available features and will show you how to maintain the rotisserie in good condition.

Our technical team will always be available to guide you for installation and answer any questions you may have. In addition we welcome your comments and suggestions.

Do not hesitate to contact us or visit our website: www.doregrill.com

DOREGRILL S.A.S.

12, Rue du Moulin - B.P. 52 – Parc d'Activités du Moulin,
44880 SAUTRON FRANCE

Tél. : + 33 (0)2 40 63 80 00 - Fax : + 33 (0)2 40 63 82 67

Email : doregrill@doregrill.com

SUMMARY

1	GENERALITY	6
1.1	MARKING	6
1.2	IMPORTANCE OF THE MANUAL	7
1.3	ALL RIGHTS RESERVED	7
1.4	GENERAL WARNING	7
1.5	WARRANTY	7
2	SHIPPING AND HANDLING	8
2.1	SHIPPING AND DELIVERY	8
2.2	UNPACKING AND MANUTENTION	8
3	TECHNICAL DESCRIPTION	8
3.1	GENERAL DESCRIPTION	8
3.2	CLASSIFICATION	9
3.3	PANEL CONTROL	10
3.4	ROTISSERIE MEASUREMENT	11
3.5	TECHNICAL INFORMATION	11
3.6	ULTIMATE USAGE	11
3.7	WIRING DIAGRAM	11
4	SET UP	11
4.1	GENERAL RECOMMENDATION	11
5	HOW TO USE IT:	11
5.1	CONTROL PANEL	11
5.2	IMPLEMENTATION	13
6	CLEANING AND MAINTENANCE	14
6.1	AFTER EVERY DAILY ROASTING	14
6.2	WEEKLY CLEANING	14
6.3	GENERAL CLEANING	14
7	MAIN REASONS OF GLASS BREAKAGE	15
8	TECHNICAL SPECIFICATION	16
9	INSTALLATION	18
9.1	GENERAL INFORMATION	18
9.2	SET UP	18
9.3	ELECTRICAL CONNECTION	18
9.4	EXSHAUST	18
9.5	GAS CONNECTION	20
9.5.1	General Information	20
9.5.2	Installation of the rotisserie	20
10	MAINTENANCE / CUSTOMER SERVICE	22
10.1	TROUBLE SHOOTING	22
10.2	SPECIFIC REPAIRS	23
10.2.1	Bulb change	23
10.2.2	Opening of the technical Unit	24
10.2.3	Change of the Spit rotation	24

11	COMPONENTS CHART GRAPHIC	26
11.1	GRAPHIC 1 – BASE ET CART AC 1.....	26
11.2	PLANCHE 2 – CONTOL PANEL	28
11.3	PLANCHE 3 – RIGHT SIDE AND DOOR.....	30
11.4	PLANCHE 4 – ROOF	32
11.5	PLANCHE 6 – SPIT SYSTEM, SUPPORT AND SAUCE PAN	36
11.6	PLANCHE 7 – ELECTRICAL CHART MAG 8 GAS.....	38
11.7	PLANCHE 8 - CERTIFICATION GAS	39



User Manual

1 GENERALITY

1.1 Marking

This equipment is ETL approved. The logo ANS/CSA on the plate and the declaration of conformity is added to the following notice.

- Name & address of the manufacturer
- Marking ANS Z83.11b-2009/CSA 1.8b-2009
- Year of Manufacture
- N° de série (MATR)
- Equipment Model (MOD)
- Certification number for AUS/NZ

<u>Australia/New Zealand</u>				SAS DOREGRILL Parc d'activité du moulin 12 Rue du moulin 44880 SAUTRON France www.doregrill.com
Model: Mag 8 Gas		Gas Type: Natural Orifice size: 3.2 mm		Appliance Type A
Order No:		MFG. Date:		Serial No:
Total nominal gas consumption: 156 MJ/h				
Gas Food Service Equipment Conforms to ANS Z83.11b-2009/ Certified to CSA 1.8b-2009 standard.			Conforms AUS/NZS standard Certification number: GMK10562	
		FOR YOUR SAFETY		
		DANGER, 240 V. DISCONNECT POWER BEFORE SERVICING UNIT Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.		
		WARNING Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.		

This plaque (23) is attached on the right corner of the rotisserie (22).

1.2 Importance of the Manual

This notice has been made for the installer as well as the user of DOREGRILL in order to give them all the necessary information to operate the rotisserie at its best and to prolong the life of the equipment. By keeping a regular maintenance, the end user should be able to resolve most incidents and minor issues that do not require the presence of a technician.

By respecting all warnings and recommendations the user of rotisserie should be protected by any potential injuries.

The time and the attention spent by reading this manual will help to learn the proper use and as well as avoid any risk of potential.

This manual is made for the following rotisserie models, **MAG 4 GAS, MAG 6 GAS AND MAG 8 GAS**, and must be kept available to the operator at any time.

The manufacturer is not responsible for any injuries to individuals, animals or property damages caused by a misuse of the rotisserie or by not respecting the rules and regulations described in the manual.

IMPORTANT: This equipment is for professional use. Therefore, in order to avoid any accident, only qualified and well trained personnel can operate this equipment. It must be installed in a ventilated area according to the rules and regulations required in the country where the rotisserie is sold. The installation, adjustment and set up maintenance must be done by a certified Gas technician.

In case of change of gas and in order to respect all international regulation, every necessary components and parts for this change must be ordered and provided by Doregrill.

1.3 All rights reserved

All rights reserved regarding this technical « Rotisserie user manual with spits Mag series Gas version » are the properties of the manufacturer. None of the content or chapter of the booklet can be reproduced or published without written authorization of the manufacturer.

1.4 General Warning

This rotisserie cannot be used by anyone (including children) who has limited physical, sensory or mental or anyone with no previous experience or knowledge. We advise to include any additional “hot surface” warning required according to the environment and the use of the appliance.

1.5 Warranty

The manufacturer ensures all rotisseries have been tested in our facilities.

The certificate of warranty is for **12**(twelve) Months. Please refer to the certificate of warranty attached to your invoice.

Any change or replacement made on the machine with non-original part cancel automatically the warranty and free the manufacturer of all responsibilities

2 SHIPPING AND HANDLING

2.1 *Shipping and delivery*

Our Rotisseries are adjusted, tested and controlled in our facilities.

The radiant burners are preheated in order to simplify the starting process. There are carefully packed to arrive in good condition.

The rotisserie is delivered on palette strapped and shrinks wrapped. The machine is protected in a carton box with plastic bubble, polystyrene and foam for shipping.

Once the box is open, be sure there is no damage during the shipping. In case of damage, please report the damage in presence of the delivery company. All claims notified on the delivery bill must be followed within 48h after delivery with a certified letter to the shipping company and to the reseller

2.2 *Unpacking and manutention*

During unpacking, do not puncture the bubble protection with a sharp object that may damage one of the components of rotisserie

The machine can be moved on a flat surface using the caster. Use a forklift under the machine if you Need to lift it.

3 TECHNICAL DESCRIPTION

3.1 *General Description*

The rotisserie is mounted on a wheel base carriage (1) with casters:

- 4 casters with brakes for the Mag4 GAS / MAG 6 GAS and MAG 8 GAS

Assembled in one main structure in 4 parts:

- Brushed Stainless Steel Base (2)
- Enameled roof top (3), reinforced with a stainless steel belt.
- Back panel (4), Fixed with 2 stainless steel omegas.
- Internal vertical enamel panels (5) with rounded angles to facilitate the cleaning.
- On carter (6) can be opened a tool which contains the technical unit (gas & electricity).
- Electrode (7) turns on the pilot (8) which facilitates the startup process of the radiant (9).
- Infrared burners (9) have a safety device using a thermocouple (10).

The radiants are speared by removal enamel deflectors (11).

-Ajustable Spits (12) which are controlled by an independent electrical motor equipped with a tip (13) which facilitate the penetration.


-Spit support (14) located on the opposite side of the motors easy to remove in order to facilitate the cleaning process.

- Lower level, sauce pan (15) in stainless steel equipped with a drain valve.
- Two tempered glass doors (16) with hinges to protect the roasting process.
- 3 recessed Quartz Lamps (17) on the ceiling of the rotisserie and providing powerful lighting. There are waterproof and protected with a screen made out of tempered glass.
- Central Control Panel (18)



There is in the back of the rotisserie, a gas shut off valve (19) dimension 20/27 ¾ with a holder pressure(20) and an electrical cable 3G2.5 (21)

3.2 Classification


Components are listed in the rotisserie

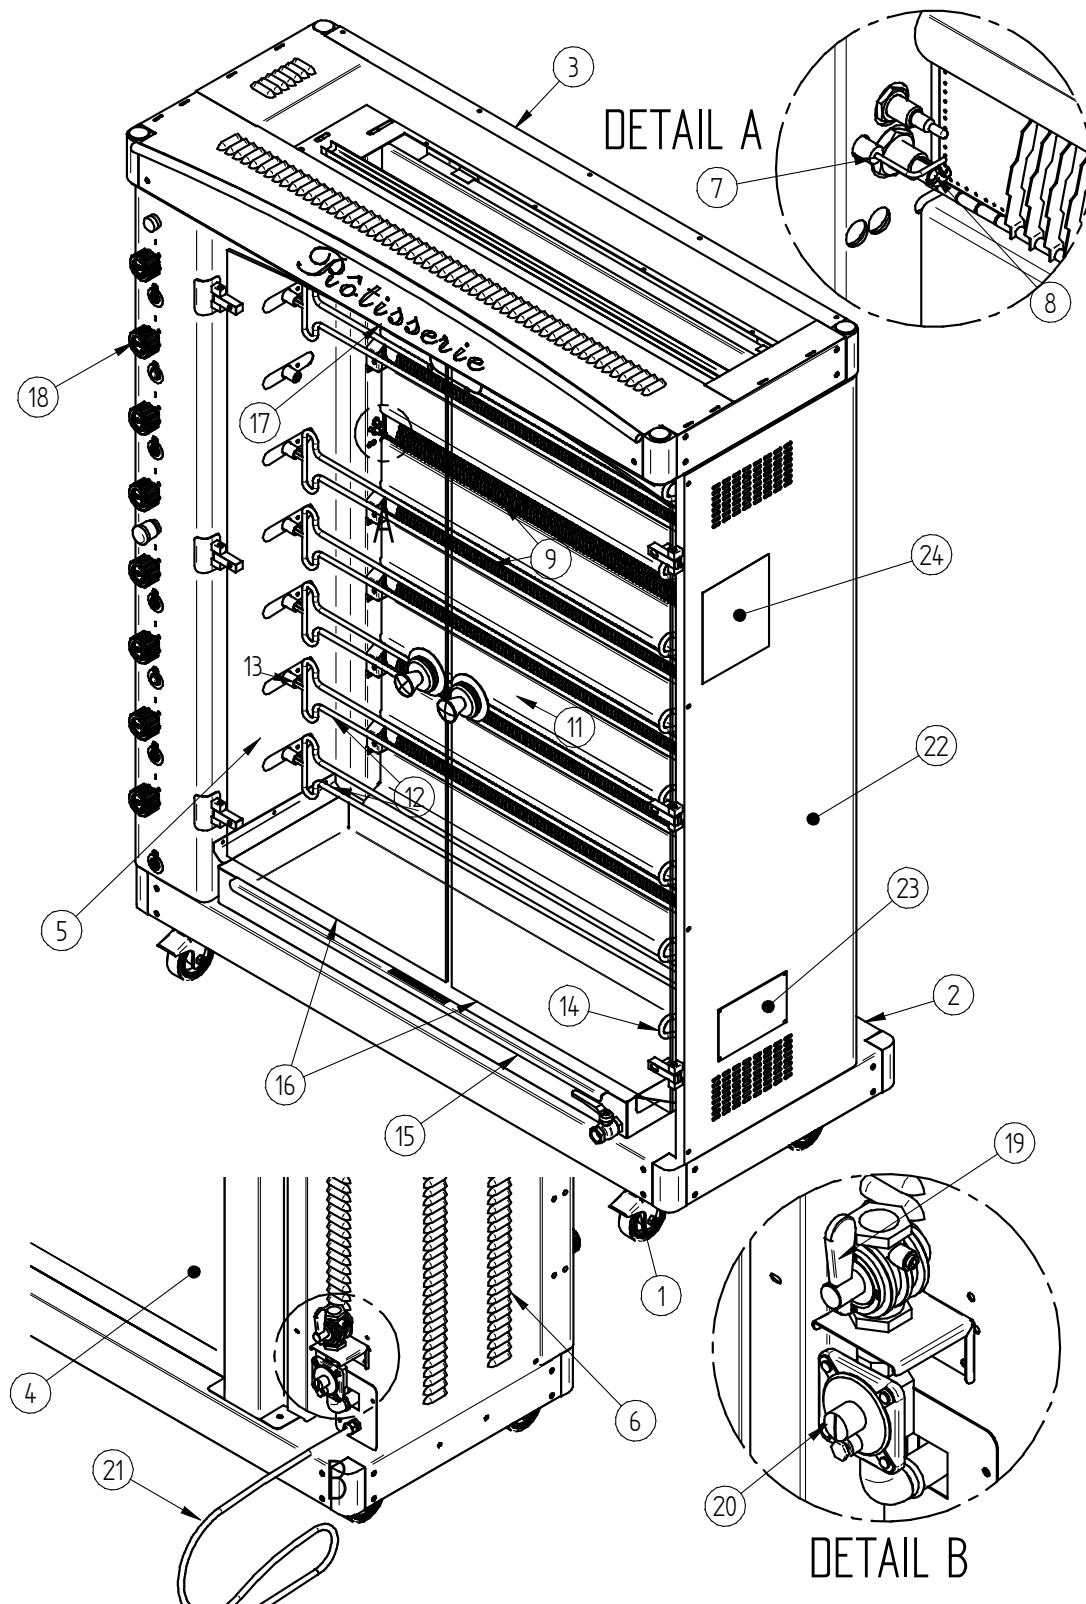


Power on indicator
Gas valve Level 8
Switch Motor Level 8
Gas Valve Level 7
Switch Pilot Level 5-6-7-8
Gas valve Level 6
Switch Motor Level 6-5
Gas valve Level 5
Emergency Stop button
Gas Valve Level 4
Switch Motor Level 4-3
Gas Valve Level 3
Switch Pilot Level 1-2-3-4
Gas Valve Level 2
Switch motor Level 1-2
Gas valve Level 1
Switch Light

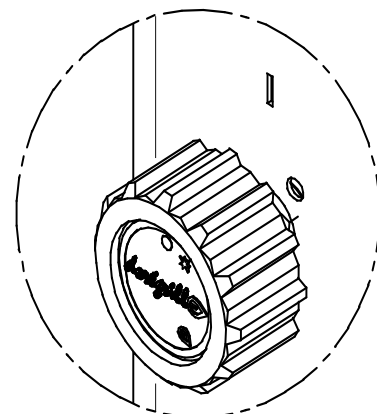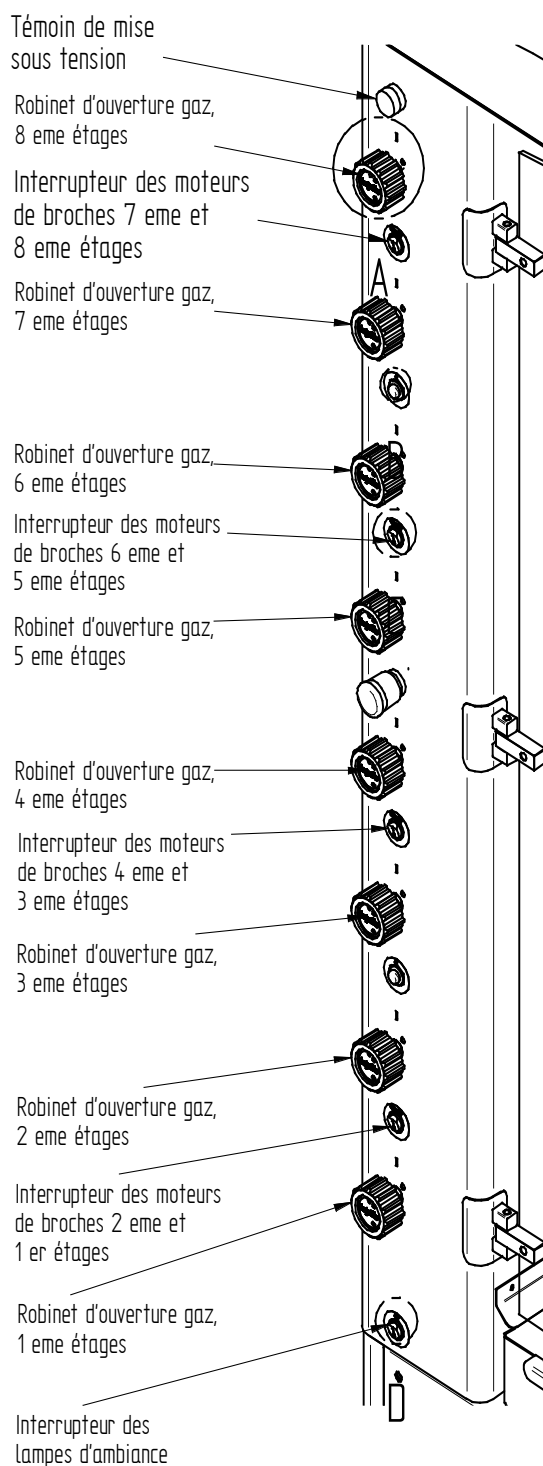


DETAIL A

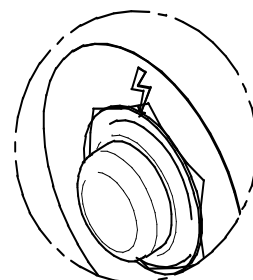

DETAIL B

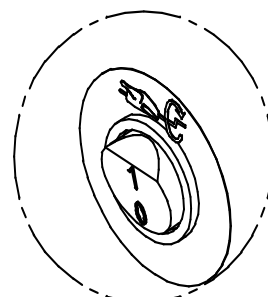

DETAIL C

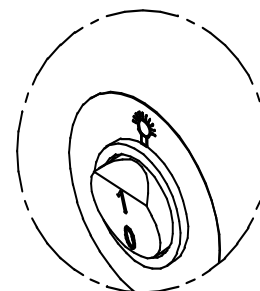

DETAIL D

3.4 Rotisserie Measurement

See Chapter 7 « Installer – Technical Information »

3.5 Technical information

See Chapter 7 « Installer – Technical Information »

3.6 Ultimate Usage

Our rotisseries are made to roast meat and poultry prepared in a hot environment and professional caterer in the food industry.

3.7 Wiring Diagram

See Chapter 10 « Installer – Graphic Chart composition »

4 SET UP

4.1 General Recommendation

Equipment installation should be performed by authorized professional installers, in accordance with state and local regulations and norms

See Chap 10 « Installation »

5 HOW TO USE IT:

5.1 Control Panel


◆ Switch / Gas Valve

Each knob is independent and individually controls one radiant
There are two positions for a knob: Off ("0") and High (big flame)

Each Valve control one radiant

Turn on the radiant : Push on knob, hold pushed and rotate/turn counterclockwise to be on 'High flame'.

Turn off the radiant : Push and rotate knob clockwise to be on "OFF" position.

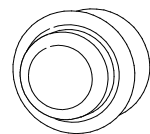


◆ Switches for motors

Each switch controls two spits.

These two spits rotate in opposite direction, so they cannot block each other when cooking bigger items (all spits on "even levels" rotate in on direction and all spits on "odd levels" rotate in the opposite direction)

Start spit rotation: Push switch up.

Stop Spit rotation: Push switch down.



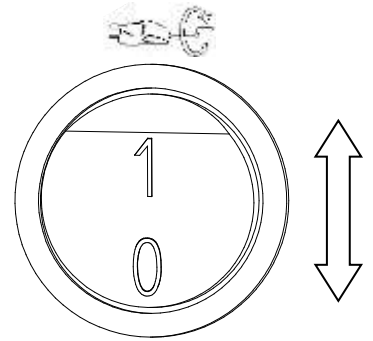


◆ Emergency Stop Button

This Button is only to be used in case of emergency and instantly stops the electrical power (motors, lights)

To use it, just press on the button all the way.

 . To power the rotisserie again, just pull on button all the way back

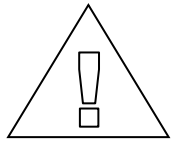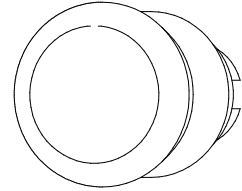


◆ Light switch

This switch controls the 3 lights located on top of the rotisserie

Turn on lights: Push switch up.

Turn off lights: Push switch down.

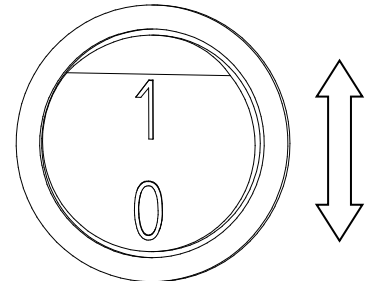


◆ Set up And Spit adjustment

The spits are adjustable in depth

Set up: Insert first the left end of the spit into the motor shaft.

Rotate slightly to make sure it snaps all the way in Intro

Then rest the right end of the spit on the support accross

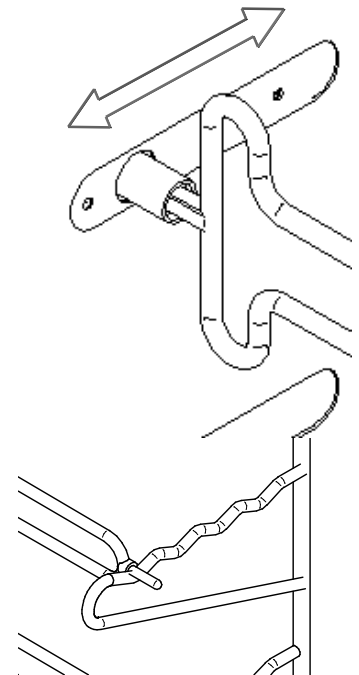

5.2 Implementation

IMPORTANT Do not put anything on the top of the rotisserie or obstruct the exhaust Device

◆ Preparation

Make sure the rotisserie is plugged in and power is on
Make sure the rotisserie is hooked up and gas is on
Turn on the light (if desired)

Put at least 3cm of water in the bottom pan and make sure to maintain this level through cooking cycles

◆ Burners (radiants) Lighting

Open slowly the main gas supply (shut-off valve), then open the gas valve of the rotisserie (located in the back)

IMPORTANT: Always light radiants one by one, starting from the top, and working your way down

Select corresponding gas knob. Push on the gas knob all the way, hold pushed and rotate counterclockwise to be on max position. The ignition must be operated with a long lighter/igniter (not provided). When the appliance is hot, operators must be very careful and use appropriate protections for the ignition of the appliance.

Repeat for all desired burners

IMPORTANT DO NOT SPRAY AEROSOL IN THE VICINITY OF THIS APPLIANCE WHILE ITS IN OPERATION

◆ Cooking Process

In order to have moist and golden chicken, It is recommended to prick them before roasting. Load the spits in the rotisserie following previously described instruction. (p.13 – Set up and Spit adjustment.)
Adjust position of the spits, according to poultry or meat size and desired cooking time.
Once spits are in place, turn on motors (so they start rotating)

IMPORTANT : Never use or put Aluminum foil in the rotisserie

In order to avoid splashes and for the rotisserie to work properly, the glass doors should stay closed during the cooking cycle.

The average cooking time for a 2.5-3 lb. chicken is 60 mn (this may vary according to poultry size and quality, marinade used, desired cooking time, environment...)

At the end of the cooking cycle, lower or turn off radiants, stop motors and unload.

When unloading, start by lifting right side, then remove spit from motors' shafts (push to the right)

6 CLEANING AND MAINTENANCE

IMPORTANT: before cleaning, make sure the burners are turned off and unplug the rotisserie.

Never use a pressure washer.

Use a protective apron, gloves and eyes protection.

Use only chemicals “special oven without caustic “and “certified food”.

Do not spray on the burners. After removing the reflectors enamelled, hanging sheets of stainless steel protection on the two brackets.

6.1 *After every daily roasting*

We recommend performing the cleaning while the rotisserie is still warm (not hot).

Make sure to wear necessary protection

Do not use abrasive pads

Remove and clean the following parts:

- Spits, (rep 12)
- Bottom drip pan (empty first), (rep 15)
- Spits Holder, (rep 14)
- Reflectors enamelled (panels between radiants), (rep 11)

Cover radiants with their shields, then wipe off the following parts with a wet soapy towel:

- Inside panels, (rep 5)
- Bottom of rotisserie, (rep 2)
- Top of rotisserie, (rep 3)
- Glass doors and light glass protections, (rep 16 and 17)

6.2 *Weekly cleaning*

Clean the top panel, above the rotisserie.

6.3 *General Cleaning*

We highly recommend that a certified technician comes once or twice a year to check and clean all mechanic and gas components of the rotisserie and to clean the inside and back areas and burners

◆ Door removal

IMPORTANT: This is a very delicate procedure

The rotisserie has been built to simplify this process by quickly removing the doors of the Hinges

7 MAIN REASONS OF GLASS BREAKAGE

7.1 *Thermal shock*

There cannot be a difference of more than 80°C between two spots of the glass doors. If that happens, the breaking point is reached and the glass doors might then shatter instantaneously
(For example: cleaning of hot door with cold towel)

7.2 *Hits*

When a glass door is inadvertently hit, especially on the edge, a tiny piece of glass might get off and therefore the molecular balance is broken. This will result in the glass shattering in the upcoming hours or days.

Such hits might happen during unpacking, installation, or when the user hits the edge of the door (with a spit, pan, cart...)

7.3 *Moving*

Moving the rotisserie regularly (like taking it outside a store and back inside every day) might result in weakening the glass

. IMPORTANT:

Glass tempered or not, is a fragile material. Therefore, it must be handled with care. But it cannot, in any case, shatter by itself (if that happens, one of the above reason is the cause)



Installer manual

8 TECHNICAL SPECIFICATION

	MAG 4 GAS	MAG 6 GAS	MAG 8 GAS
DIMENSIONS			
Length	1480mm	1480mm	1480mm
Width	690mm	690mm	690mm
Height	1130mm	1490mm	1850mm
Weight (empty)	156kg	207kg	266kg
Maximal load inside	40kg	60kg	80kg
Technical Components			
Spit			
Number	4	6	8
Usable Lenght	1050mm	1050mm	1050mm
Number of motors			
Number	4	6	8
Voltage Wattage	240V/15W	240V/15W	240V/15W
Gas Burner			
Type: Radiant	Yes	Yes	Yes
Number	4	6	8
Power Rating	23,884 BTU/hr	23,884 BTU/hr	23,884 BTU/hr
Radiant Consumption			
Propane 15" WC	0,544 kg/h	0,544 kg/h	0,544 kg/h
Nat 8"WC	0,741 m³/h	0,741 m³/h	0,741 m³/h
Interior Light			
Number	3	3	3
Voltage, power	240V / 200 W	240V / 200 W	240V / 200 W
Light switch			
Number	3	3	3
Voltage, intensity	240V / 15A	240V / 15A	240V / 15A
Motor Switch			
Number	3	3	3
Voltage, intensity	240V / 15A	240V / 15A	240V / 15A
Voyant de mise sous tension			
Number	1	1	1
Voltage, power	240V / 2W	240V / 2W	240V / 2W
Power Cord			
Section	3x2,5mm²	3x2,5mm²	3x2,5mm²
Fiche : 1 phase + Neutral + Ground	Yes	Yes	Yes
CAPACITY			
Number of Chicken <i>(Depending of the Size)</i>	24/28	36/42	48/56
TOTAL Consumption			
Total Consumption (Gaz Selected)			
Natural Gas 1.0 kPa	78MJ/h	117MJ/h	156MJ/h
Total Electrical Consumption with lights	792 W	842 W	892 W

Gas and pressure table

Country	Australia
Category	Natural Gas
Pressure (WC)	1.0 kPa

Power of unit-burners

GAS	Ø Injector	First position (full)
Natural gas 1.0 kPa	Ø 3.2 mm	19.5 MJ/h

9 INSTALLATION

9.1 General Information

The installation of the rotisserie must be done by an authorized professional technician in accordance to the AS/NZS 5601 and in the rules and regulation in the country where it is used.

The rotisserie must be installed on a level ground. If it is not level it is required to place packing plates under the appliance to ensure stability.

9.2 Set up

Unpack the rotisserie, spits and accessories and remove all transit protections.
Install the rotisserie far from inflammable materials (wood, plastics...), minimum clearance to combustibles is 50mm to side walls and 300mm clearance to rear walls.
If there are any inflammable materials around, they must be protected with heatproofing materials

IMPORTANT: All installations or modification of gas equipment must be performed by a certified technician

9.3 Electrical Connection


The line has to be 240V/60Hz single phase, must be grounded (always connect the Earth wire) and protected with a 10 Amps breaker
Before plugging in, make sure the line is connected properly

IMPORTANT: The manufacturers cannot be held responsible in case of an damage or incident resulting from improper wiring


9.4 Exhaust

An exhaust is mandatory for the operation of the rotisserie. We recommend a ventilation hood with a grease filter (type A1).
Exhaust systems must be on when the rotisserie is in used and must ensure an adequate amount of incoming air
Any exhaust system must be installed in accordance with AS/NZS 5601 and local building codes.


Angle Hood

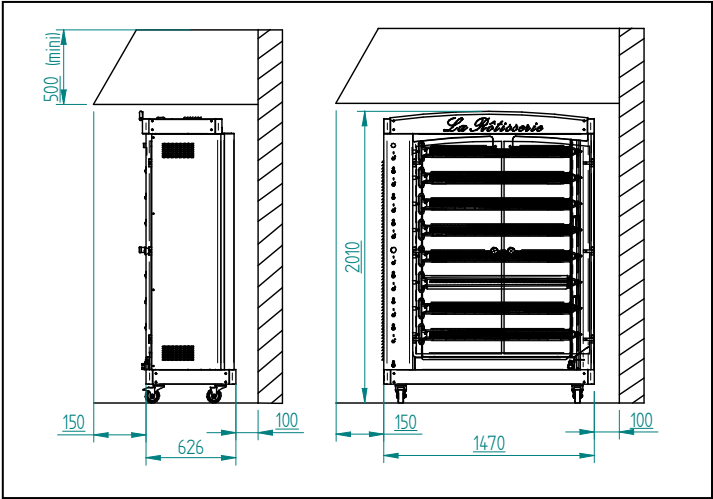

Wall Hood:

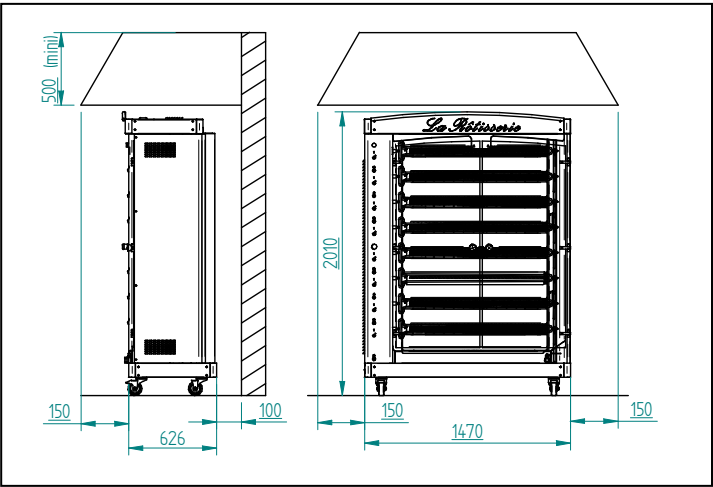

Center Hood

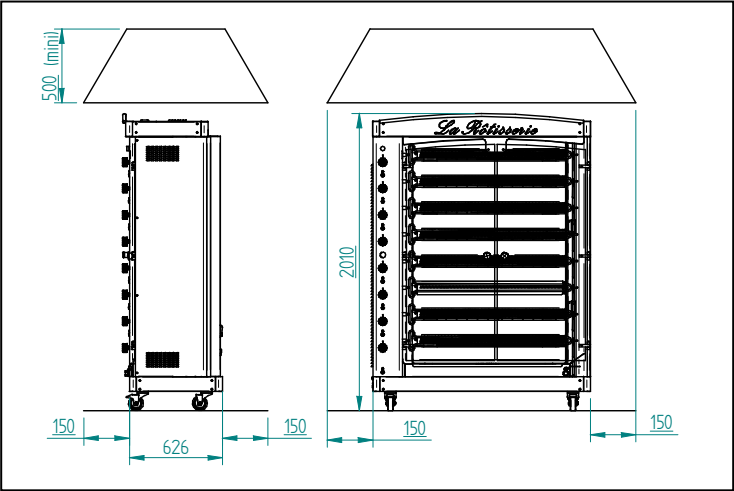

IMPORTANT: Each rotisserie is set up at the factory for a certain type of gas.

9.5.1 General Information

We recommend the use of a flexible hose of $\frac{3}{4}$ " diameter with quick disconnect and a gas piping size of at least $\frac{3}{4}$ " as well

Make sure that the gas piping of the building and of the rotisserie are compatible (connectors/fittings might be necessary)


Gas piping must never be installed to run under a burner

Use approved sealants at all external gas connections

Install flexible hose properly:

- Mount it between installation elbows (see #1)
- Make sure it follows a smooth, curved bend (it should form a "downward "U" loop) (see chart 03).
- Avoid sharp bends that may restrict the gas flow to the rotisserie (see fig. 01).

In order to minimize "incoming gas losses", hook up the rotisserie as close as possible to the inlet supply with gas piping of a minimum diameter of $\frac{3}{4}$ "

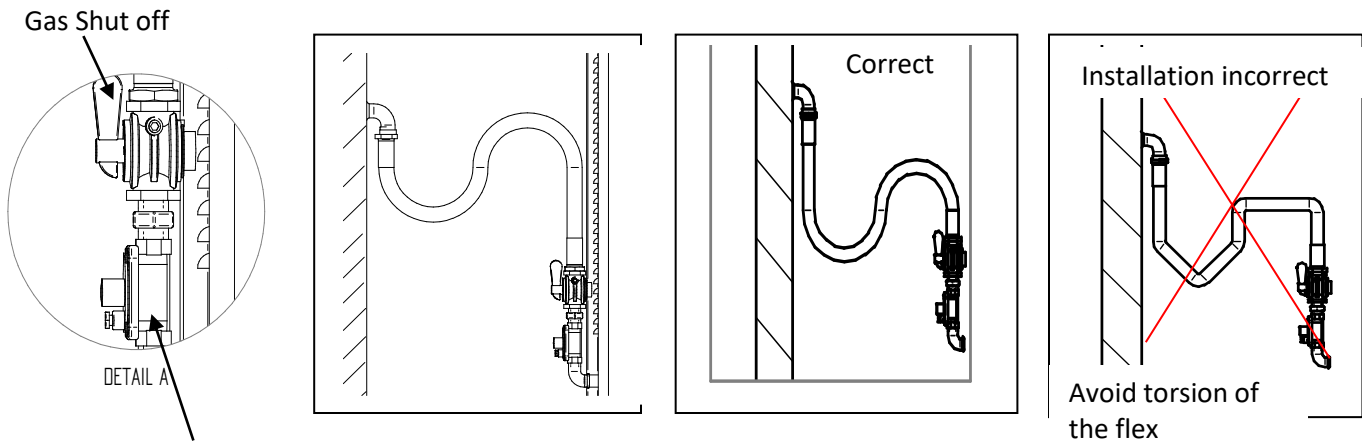

Maxitrol Regulator

Figure 01

9.5.2 Installation of the rotisserie

To connect the rotisserie to the main gas line you must use a hose assembly certified to AS/NZS 1869 Class B or D, and a restraint chain or wire in accordance with AS/NZS 5601 shall be fixed to the appliance and fixed to the wall within 50mm of each connection point. The length of the chain or wire shall not exceed 80% of the length of the hose assembly/.

The operation of the appliance must be tested following commissioning by the installer. Inlet pressure range must be 1.13-5kPa, and measurement of the pressure to be taken from the regulator.



MAINTENANCE

10 MAINTENANCE / CUSTOMER SERVICE

All Services on the Rotisserie must be done by a Qualified Technician

10.1 *Trouble shooting*

This section will help to solve minor problems without the presence of a technician

Trouble Shooting	Possible Problem	What to do
GAS line		
Burners can't be lit	- The main shut off gas valve (from building) is not opened - The rotisserie shut off gas valve is not opened - The hose is not connected - There is still air in the piping	- Open the main shut off gas valve - The rotisserie shut off gas valve is not opened -Connect the hose -Empty the air by bleeding pilots
1 burner is not working properly	- Piping or burner is clogged by dust, debris.... -The burner's gas valve is defective -The injector is defective -The burner is defective	Call your installer/contractor
All burners are not working properly	The incoming gas pressure is too low	- Make sure that all gas valves are opened all the -Have gas pressure checked (with burners on) - Call your installer
1 burner doesn't stay lit	-The gas valve is defective -The pilot/thermocouple is defective -The burner is defective	Call your installer/contractor

Trouble Shooting	Possible Problem	What to do
Electrical Circuit		
Power Light Off	- No Power - Not plugged - Defective Light	Turn power on and Breakers on Plug It Change bulb
Interior Light off	-Defective bulb - Defective electrical connexion - Defective switch	Change Bulb Call electrician Call electrician
All interior light off	-Defective electrical connexion -Defective switch	-Call electrician
1 Spit not working	Defective Motor -Defective electrical connexion	Call electrician
One or more spits are not working	-Defective switches - Defective electrical connexion	Call electrician
Spits are not working and the lights are off	-The emergency Button is pushed _ Defective electrical connexion	Pull the emergency button

10.2 Specific repairs

10.2.1 Bulb change

This change can be performed by the user.

ATTENTION: Before replacing a light bulb, let it cool down, in order not to get burnt

Turn off and unplug the rotisserie

Loosen bolts with a wrench. Remove bolts and washers

Slide and remove glass protection

Remove old light bulb

Put new one in. NEVER touch the new bulb with your fingers: always use a soft protection

Once the bulb has installed, put back all protection the glass protection.

10.2.2 Opening of the technical Unit

The technical unit is located on the left side of the rotisserie, behind the control panel. It is the access to repair several electrical and Gas parts

This operation must be done by a qualified technician.

Before opening the unit, unplug the rotisserie and shut off the gas valve behind the machine. Unscrew the exterior panel. Once the operation is completed, just put it back as originally mounted.

10.2.3 Change of the Spit rotation

To cook heavy load of poultry without stopping the mechanism, the motors of the even spits turn to one direction and the motors of the uneven spits turn to the opposite direction

This operation must be done by a qualified technician.

Control the rotation after turning off gas valve and electricity and then open the unit

With a screwdriver, remove the two screws of the rotor. Remove the coil bloc, flip it and put it back on the bloc of the rotor

Put back the caliper and two screws; verify the coil runs without friction and tight the screws

Plug the motor and check the rotation prior to closing the Technical Unit.

GAS	Ø Injector
Natural gas	Ø 3.20mm (G20/G25)



Components Chart Graphic

11 COMPONENTS CHART GRAPHIC

11.1 Graphic 1 – Base et Cart AC 1


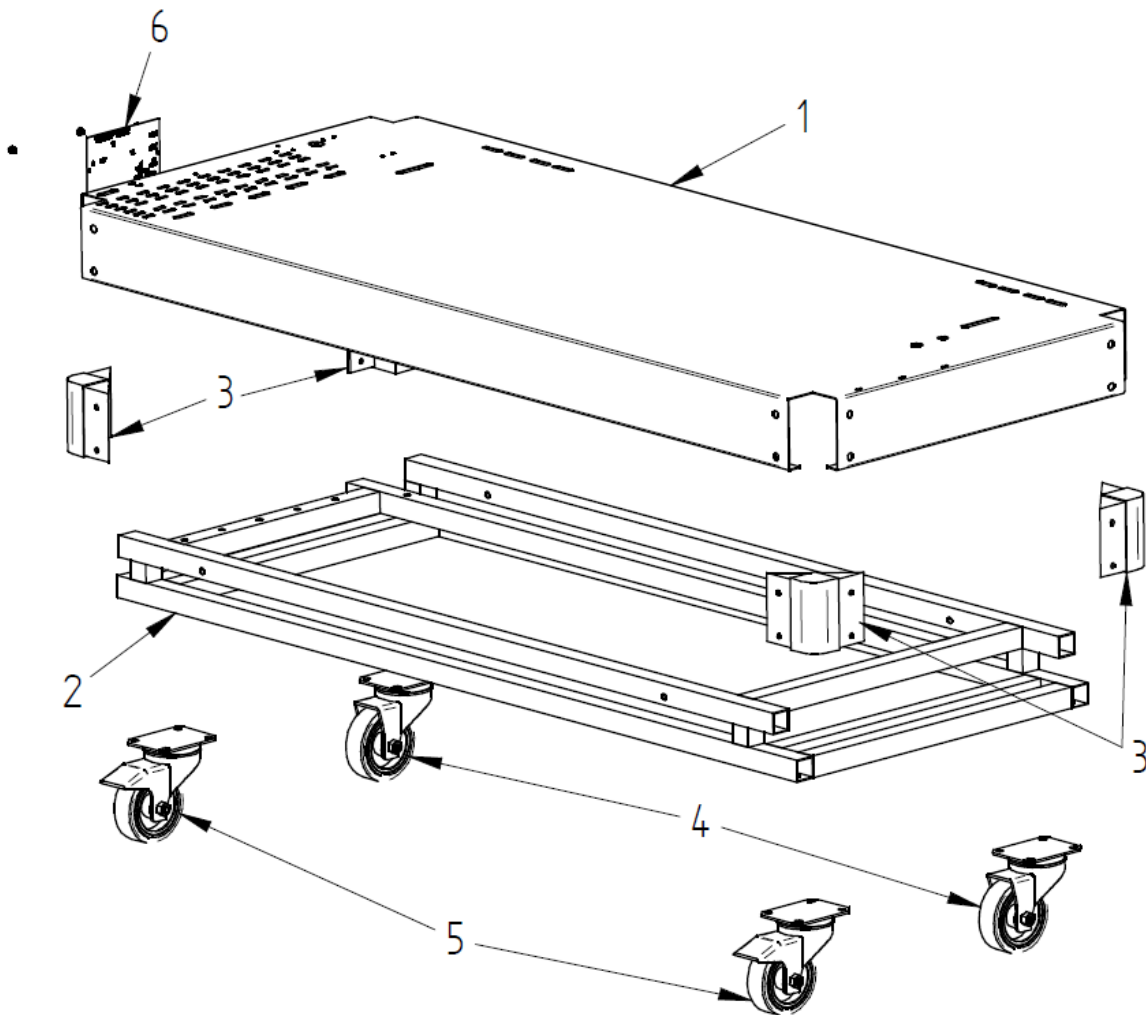


Planche 1 – Base and Cart AC 1

Mark	Reference	Designation	Quantity for MAG 8 GAS	N° certificate
01		Base	1	
02		Tubular Chassis 40 x 40	1	
03		Plastic Corner	4	
04		Circular Caster, no brake diam 100	2	
05		Circular Caster, with brake diam 100	2	
06		Manufacturer ID Plate		

11.2 Planche 2 – Control Panel

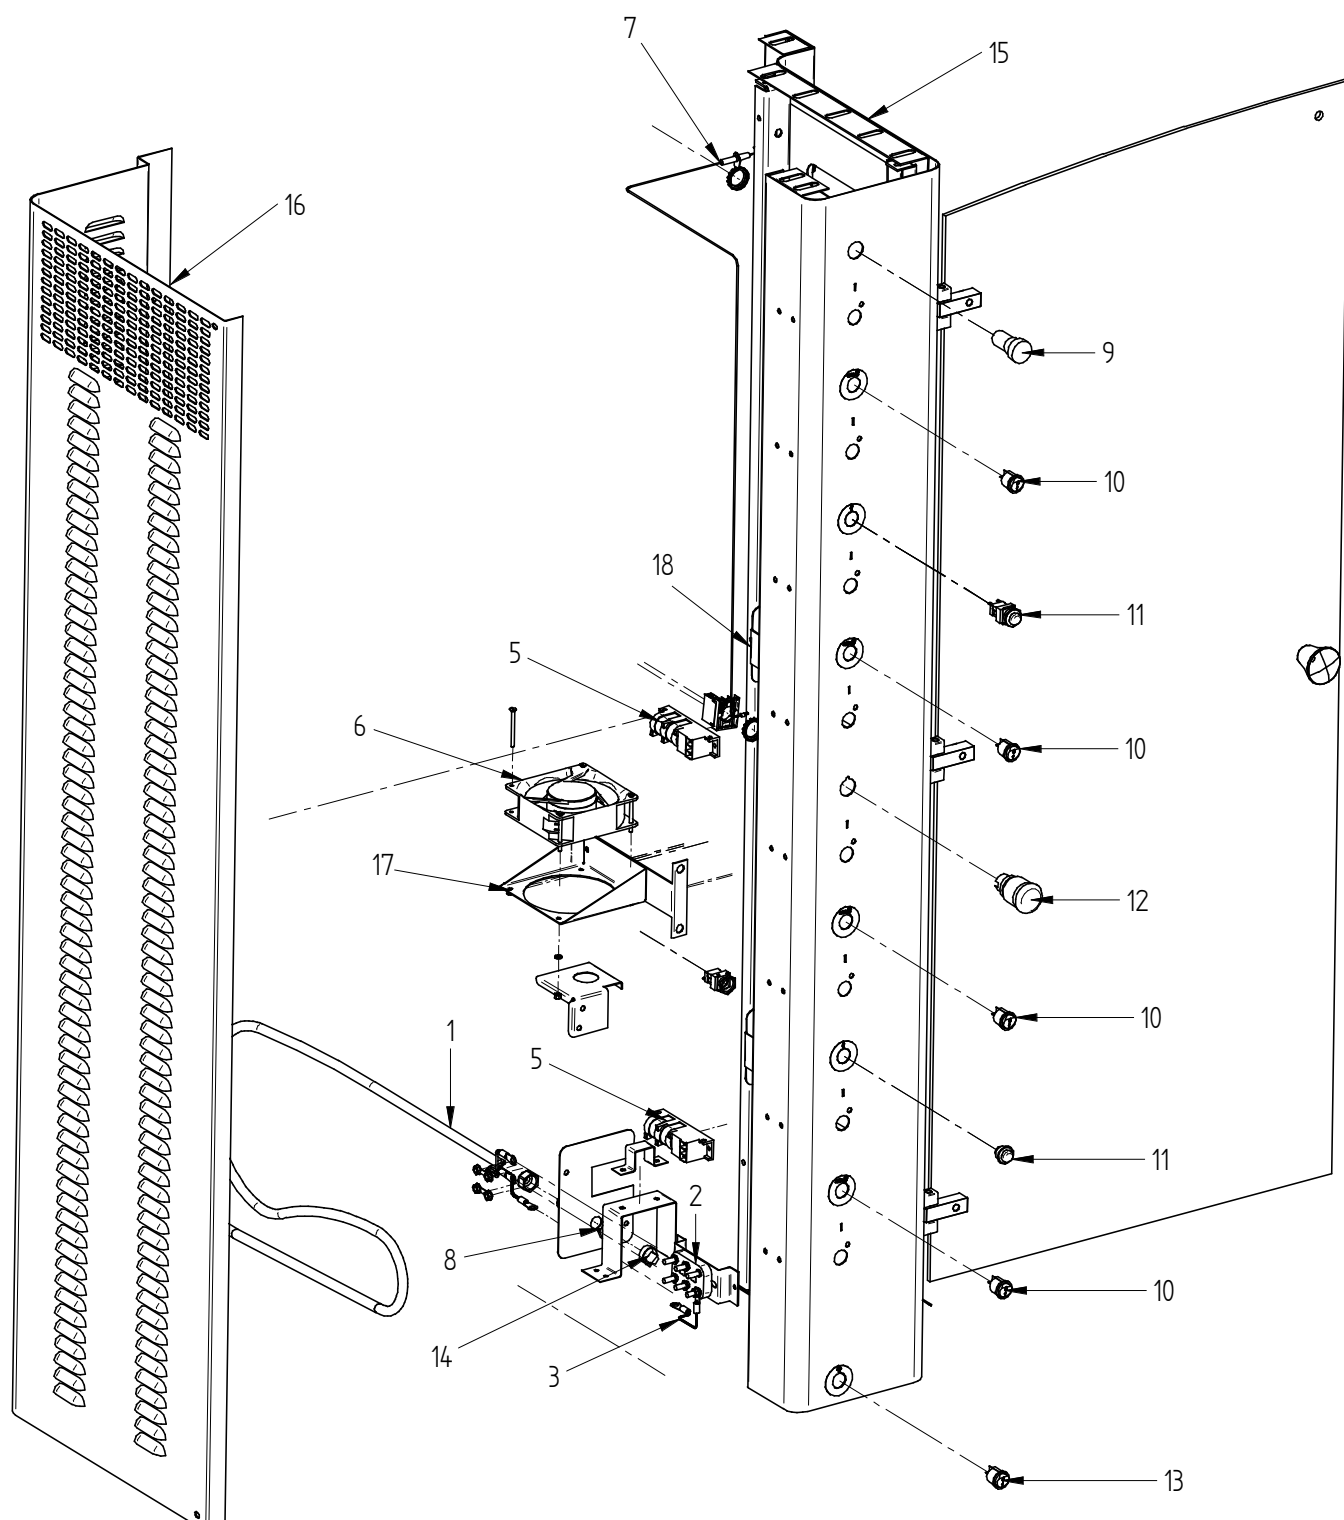

Mark	Reference	Designation	Quantity for MAG 8 GAS	N° certificate
01	CC600	Cable source 3G 2.5	2.5	CC600 02041403
02	ME 3	Terminal Bloc	1	
03		Ground Wire section 1.5	5	
04	Ormerin	Cable NVAS	10	Silicable style 3513
05		Fuse coil	2	
06		Fan	1	
07		fuse	8	
08		Nylon cable gland	1	
09		Pilot	1	
10		Switch motors 0/1	3	
11		Pilot switch	2	
12		Emergency button (coup de poing)	1	
13		Light switch 0/1	1	
14		Cable Ties	1	
15		Left Inside Panel	1	
16		Left outside Panel	1	
17		Fan support	1	
18		Support coil Set	1	

11.3 Planche 3 – Right side And door

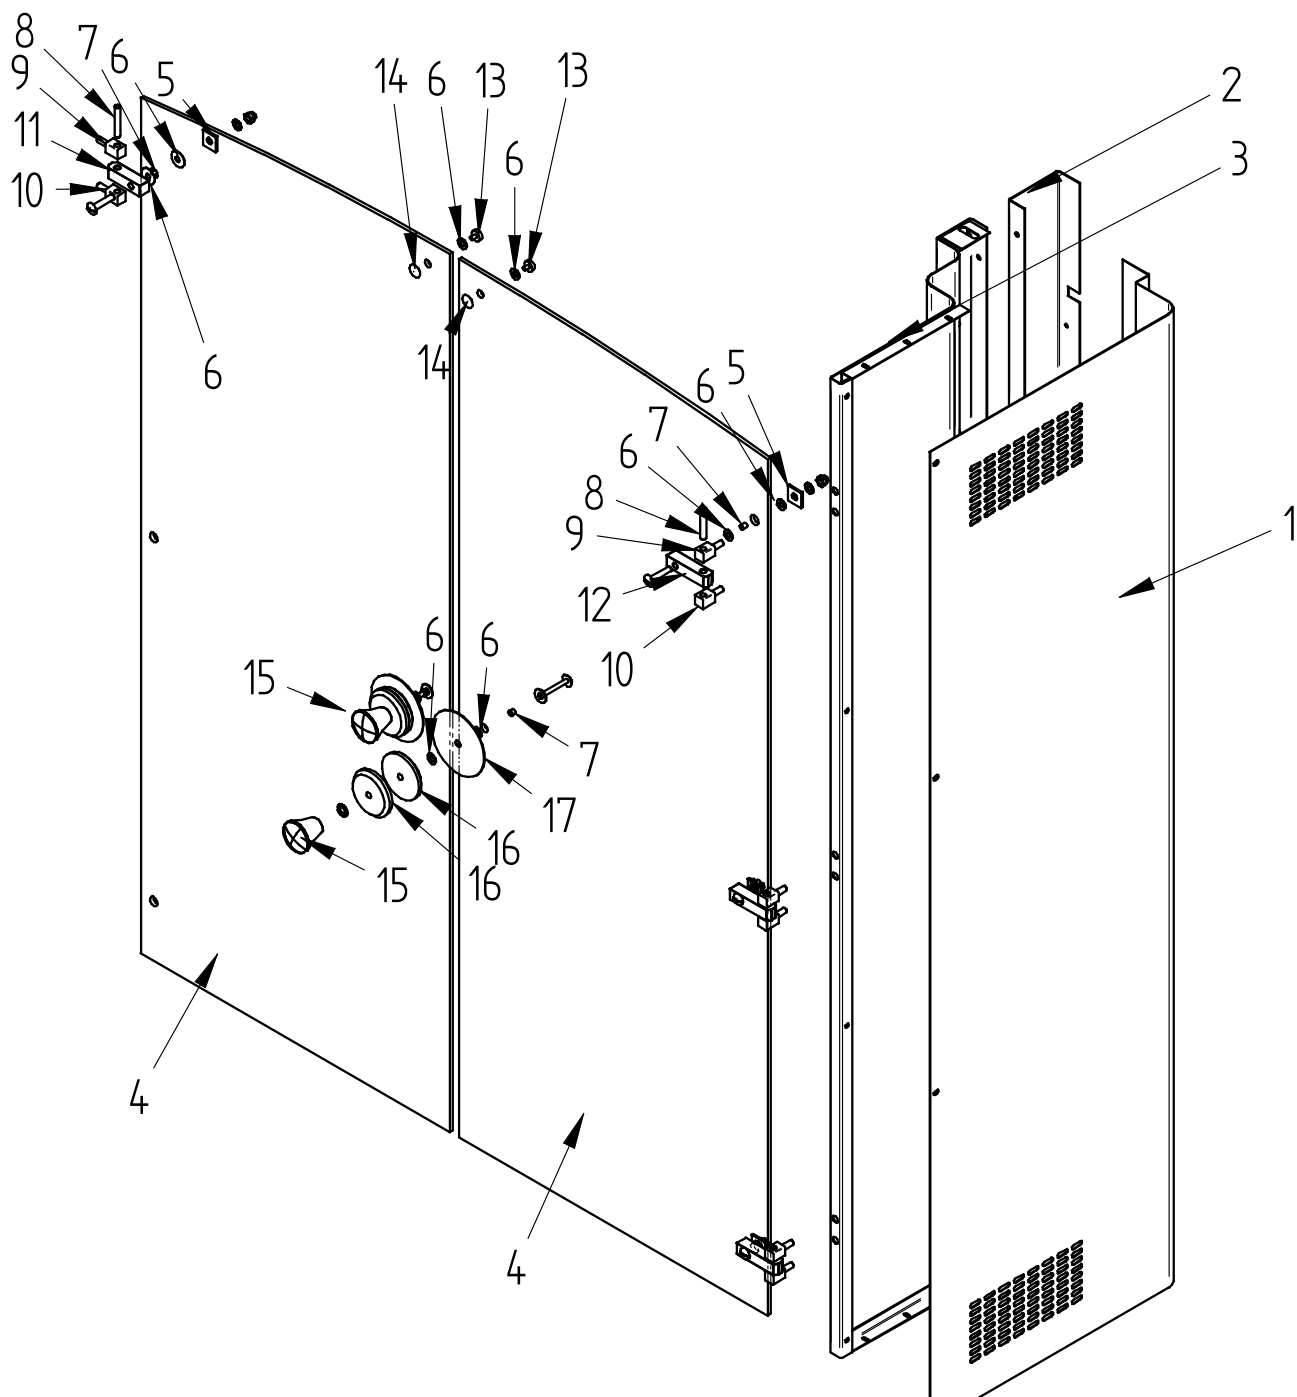


Planche 3 – Right side and Doors

Mark	Reference	Designation	Quantity for MAG 8 GAS	N° certificate
01		Right Outside Panel Spit	1	
02		Inside Panel Omega	1	
03		Right inside Panel	1	
04		Glass n°132	2	
05		Hinge Plate	6	
06		Isolating Washer	16	
07		Protective Glass Spacer glaze	6	
08		Hinge pin	6	
09		Hinge component 1	6	
10		Hinge component 2	6	
11		Hinge component 3	6	
12		Hinge screw	6	
13		Door Magnet	2	
14		Cover for Magnet	2	
15		handle	2	
16		insulating ring	4	
17		Stainless steel ring	2	

11.4 Planche 4 – Roof


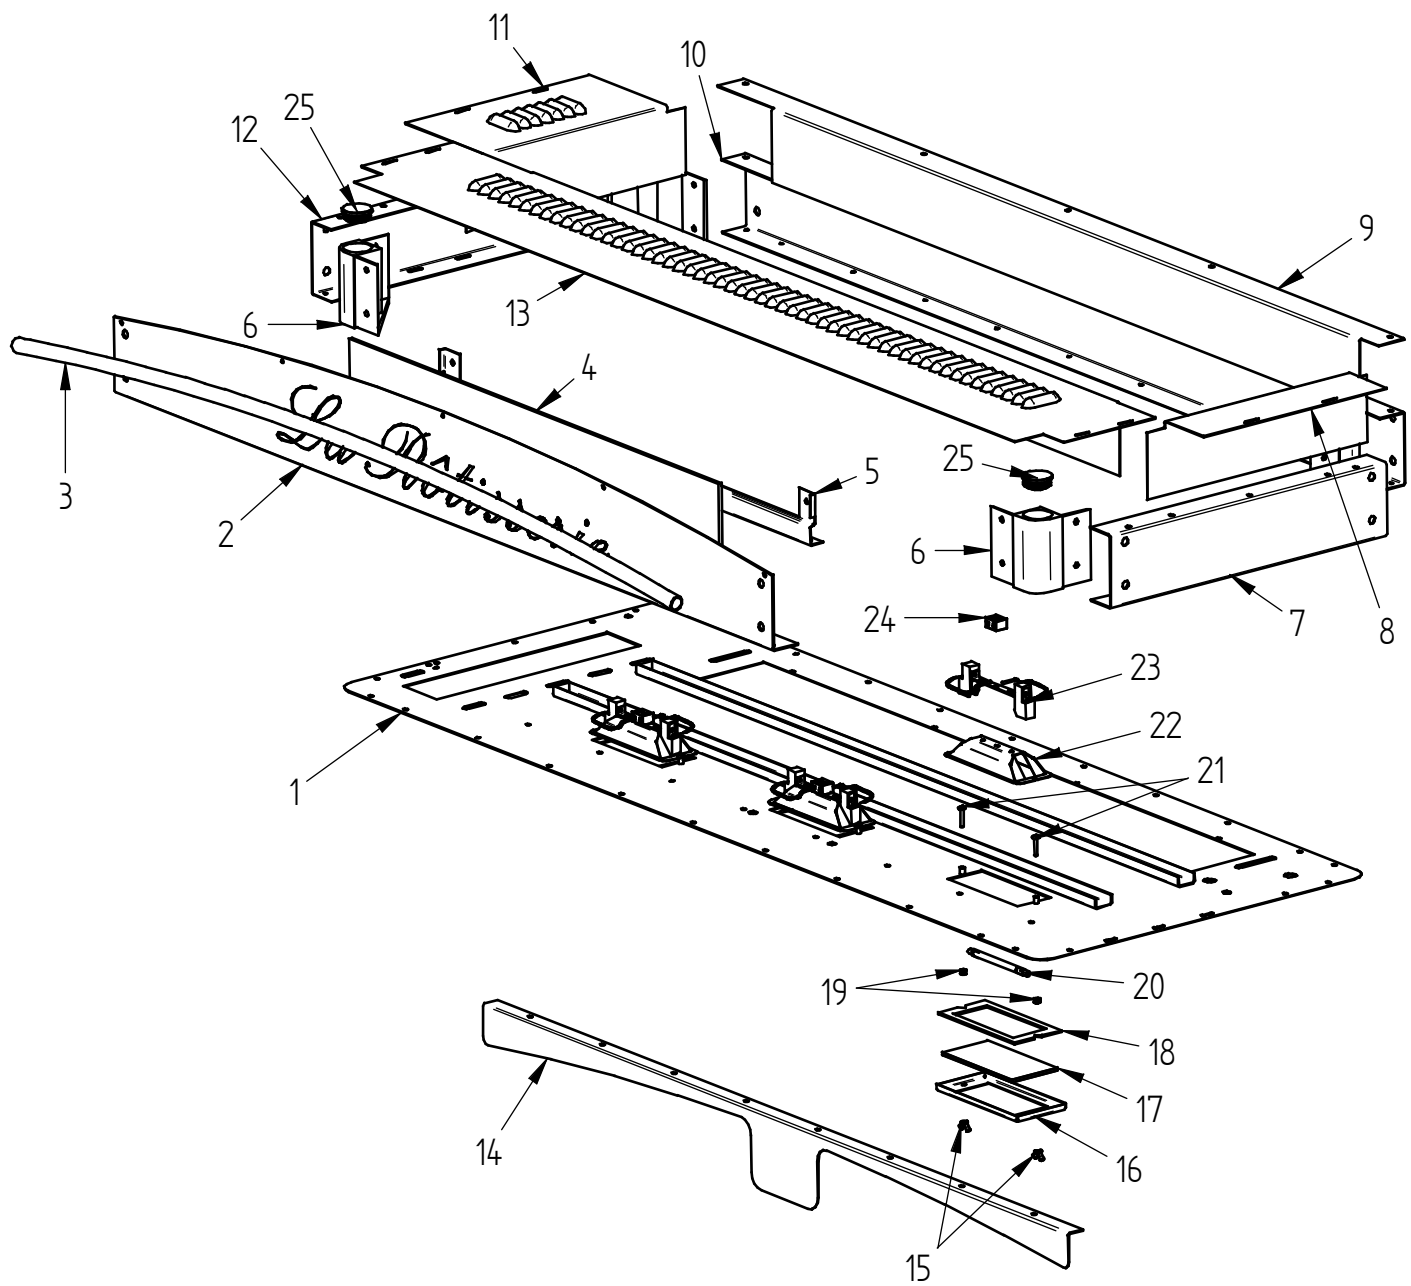


Planche 4 – Roof


Mark	Reference	Designation	Quantity for MAG 8 GAS	N° certificate
1		Top Plate	1	
2		Curved Front sign Plate	1	
3		Rounded Bar	1	
4		Glass sign	1	
5		Support glass Sign	1	
6		Corners	4	
7		Right side Plate	1	
8		Top right side plate	1	
9		Top Back plate	1	
10		Back Plate	1	
11		Left louver Plave	1	
12		Left side Plate	1	
13		Front Louver plate	1	
14		Glas door stopper	1	
15		Win nuts american type	6	
16		Propection case light	3	
17		Glass Protection light bulb	3	
18		Glass Protection Gasket	3	
19		Nut M4 inox	6	
20		Light quartz 250W	3	
21		Screw M4 x 25	6	
22		Stainless steel Deflector	3	
23		Light bulb Holder	3	
24		Ceramic Contactor	3	
25		Polyamid plug	4	

11.5 *Planche 5 – Circuit line*

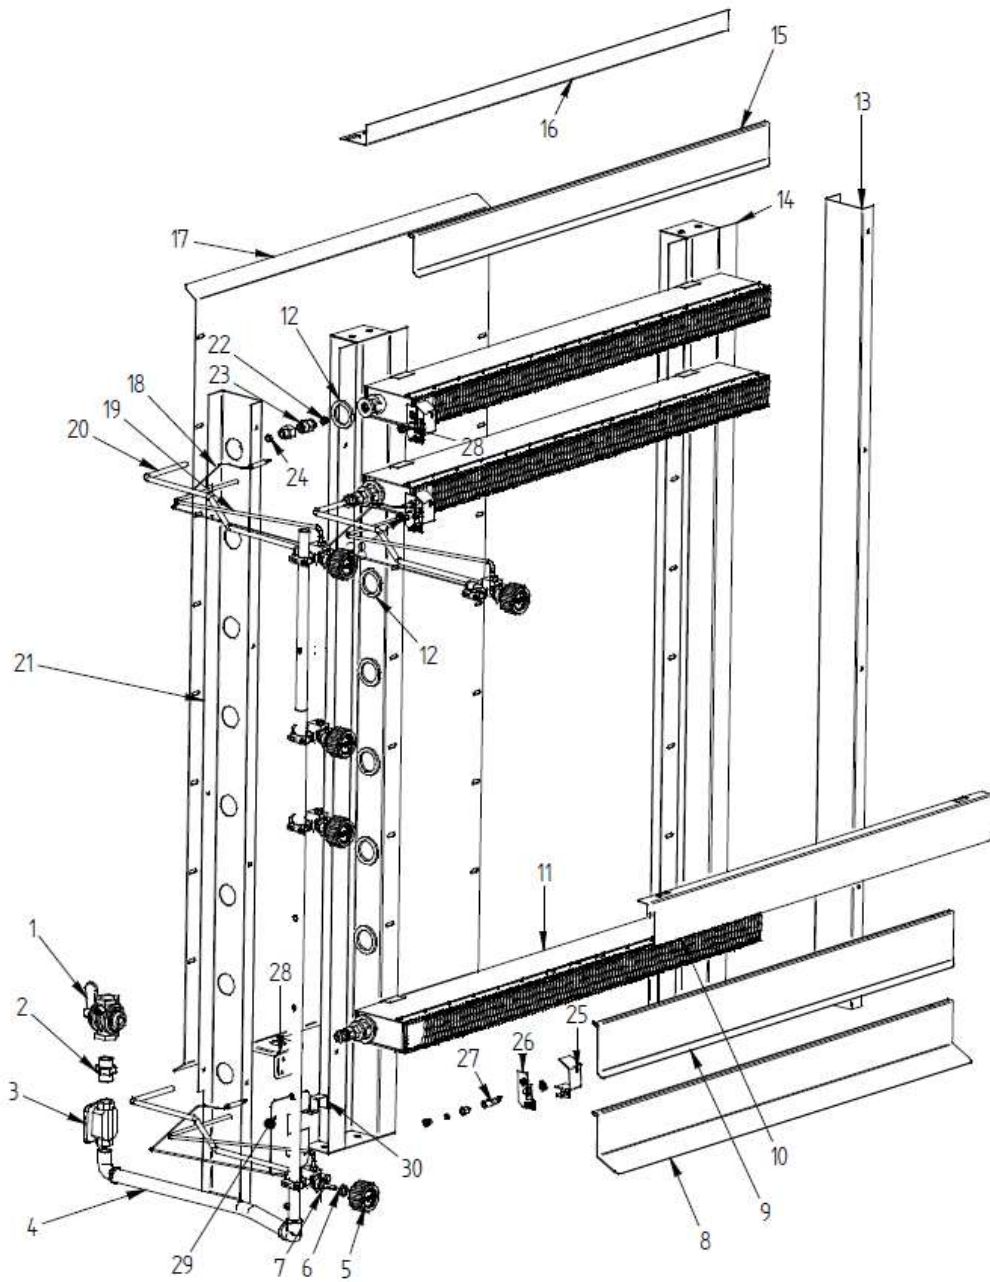


Mark	Reference	Designation	Quantity for MAG 8 GAS	N° certificate
1		Gas Valve	1	
2		Staight Connector	1	
3		Gas regulator	1	
4		Gas Pipe	1	
5		Gas Knob	8	
6		Gas Screw Valve	8	
7		Gas Valve	8	
8		Bottom Deflector	1	
9		Middle Deflector	7	
10		Burner Shield	8	
11		Burner	8	
12		Support Burner	8	
13		U pour CI Spit	1	
14		Oméga support radiant	2	
15		Top Deflector	1	
16		L shape support	1	
17		Back Panel Burner	1	
18		Thermocouple	8	
19		Stainless Steel pipe diameter 6 pilot Assembly	8	
20		Aluminium pipe diameter steel 10 pour adiant Burner	8	
21		Cover gaz line	1	
22		Injector	8	
23		Injector Block	8	
24		Olive	16	
25		Pilot guard	8	
26		Switch Support	8	
27		Pilot Assembly	8	
28		L Shape Support	1	
29		Back Cover	1	
30		Oméga Lock Gas Pipe	1	

11.5 *Planche 6 – Spit system, support and sauce PAN*

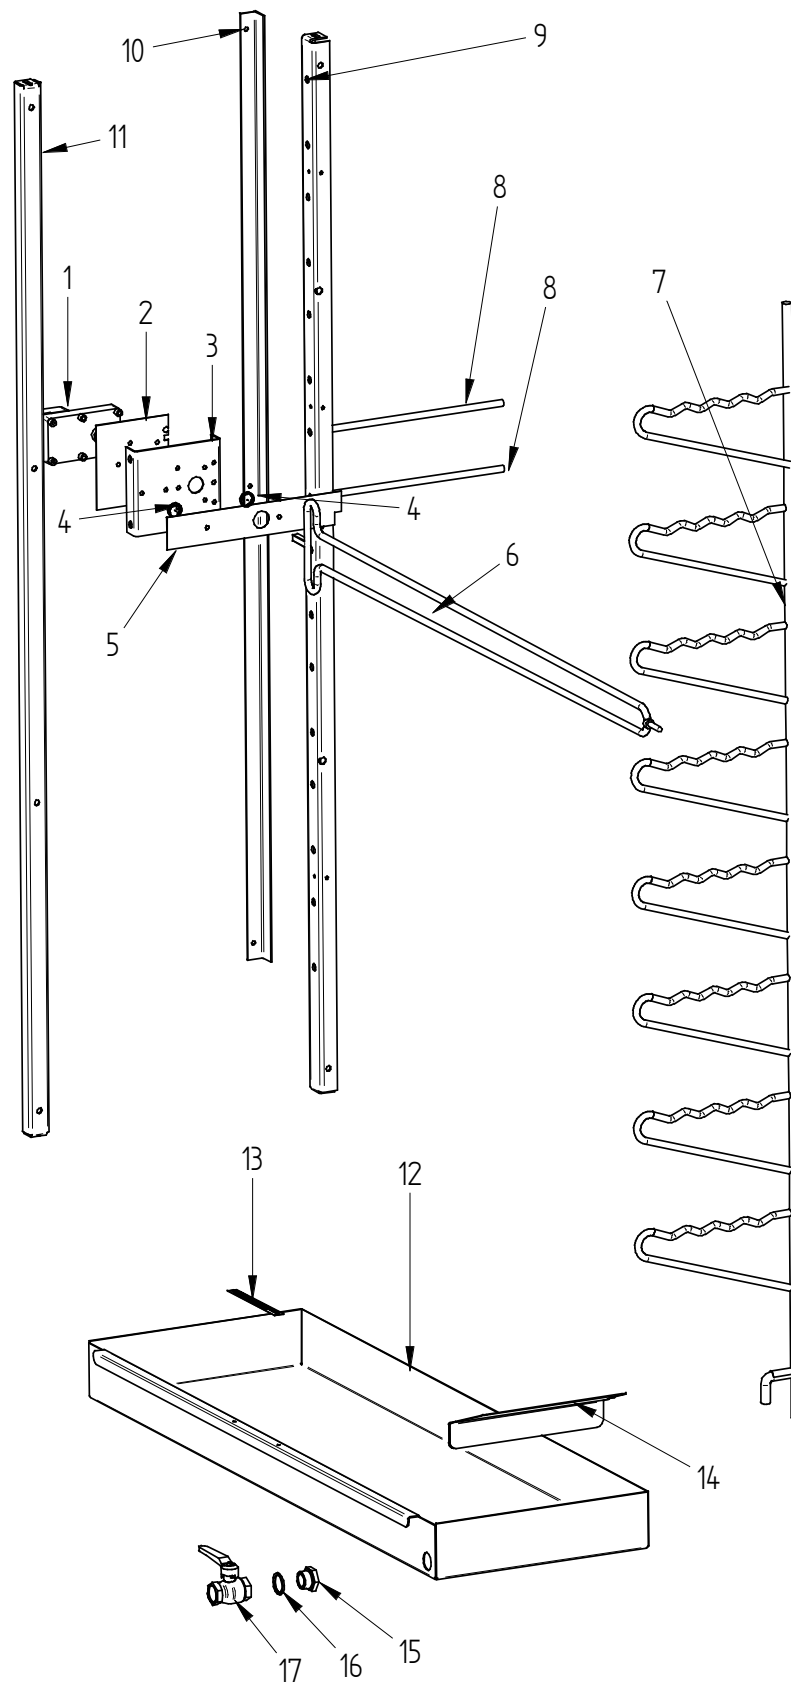

Mark	Reference	Designation	Quantity for MAG 8 GAS	N° certificate
1		Motor	1	
2		Isolating plate	8	
3		Motor Plate	8	
4		Spring	16	
5		Intermediary Plate	8	
6		Spit	8	
7		Spit holder	1	
8		Motor supports diameter 3/8"	16	
9		Motor support holder 3 "1/8	1	
10		Holder	1	
11		Motor Support 2'2/4	1	
12		Sauce Pan	1	
13		Label	1	
14		Sauce Pan	1	
15		Bolt water valve	1	
16		Washer water Valve	1	
17		Water valve		

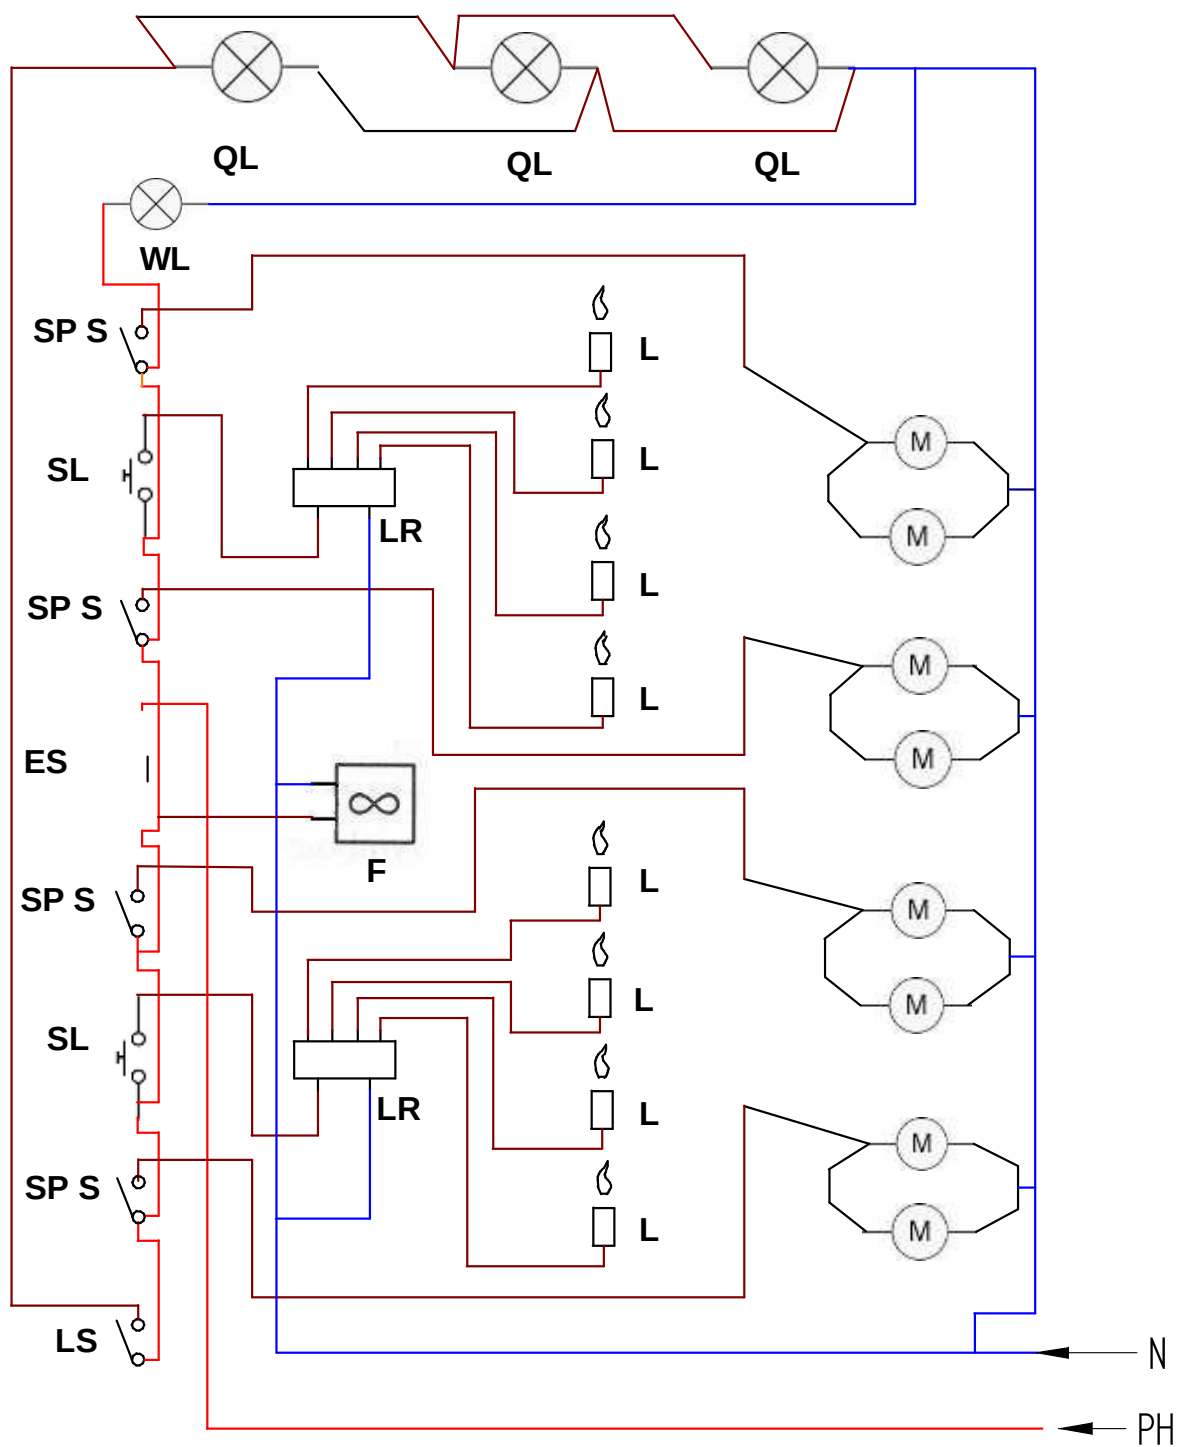

QL: Quartz lamp
SP S: Spit switch (on/off)
SL: Switch lighter
LS: Light switch (on/off)
LR: Lighter reel

F: Fan
M: motor
L: Lighter
WL: Warning light
ES: Emergency stop



Surveillance
EC Surveillance

**ATTESTATION DE CONTROLES INOPINES D'APPAREILS
(RANDOM CHECKS OF APPLIANCE ATTESTATION)**

(paragraphe 2 – Annexe II de la directive 90/396/CEE Appareils à gaz)
(paragraph 2 – Annex II of the Gas appliances directive 90/396/CEE)

Numéro : C.I. 0067 (Rév.8)

Number :

CERTIGAZ (numéro d'identification 1312), atteste avoir effectué des contrôles d'appareils
CERTIGAZ (identification number 1312), attest to have issued random checks of appliances

- **pour le fabricant :**
for the manufacturer **DOREGRIL**
12, rue du Moulin
44880 SAUTRON
- **dans son usine de :**
in its factory located in : **Même adresse**
- **pour vérifier que les appareils suivants :** **APPAREILS DE CUISSON PROFESSIONNEL.**
to verify that the following appliances : **(CATERING APPLIANCES)**
- **sont en conformité respectivement avec le(s) type(s) décrit(s) dans le(s) certificat(s) :**
respectively in conformity with types described in certificates :

1312AS1993 – 1312AT2370 – 49BL3100

La validité de cette attestation est de 12 mois à compter de sa date d'émission, sous réserve de contrôles

Le Directeur Général

Paris le : 20/10/2009

Kris de WIT



CERTIGAZ SAS - 52 rue de Courcelles - F75008 PARIS - www.certigaz.fr

