




Read the operating instructions prior to commissioning

Operating instructions

Cooker with baking oven

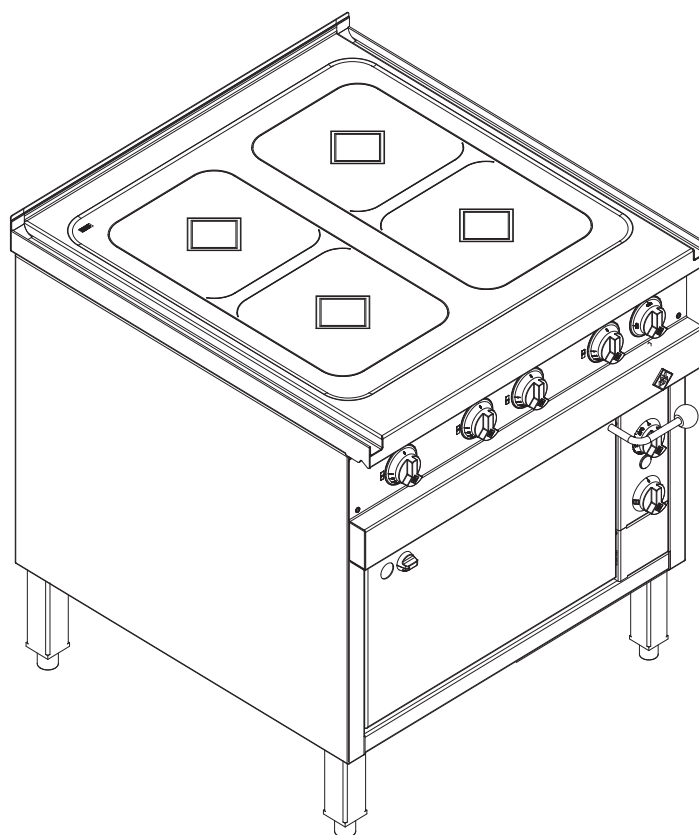

Translation from the original document • 2023406-20ABDE-- • 19/09/2022

Unit	Type of energy	Unit type	Model
Vitro cooker with glass ceramic cooktop	Electric	Floor-standing unit	OPEHEV4EB
Baking oven			O7EHEV4EB HLEHEV4EB

2023406-20ABBE--

en-GB

Operating and display elements

Cooker


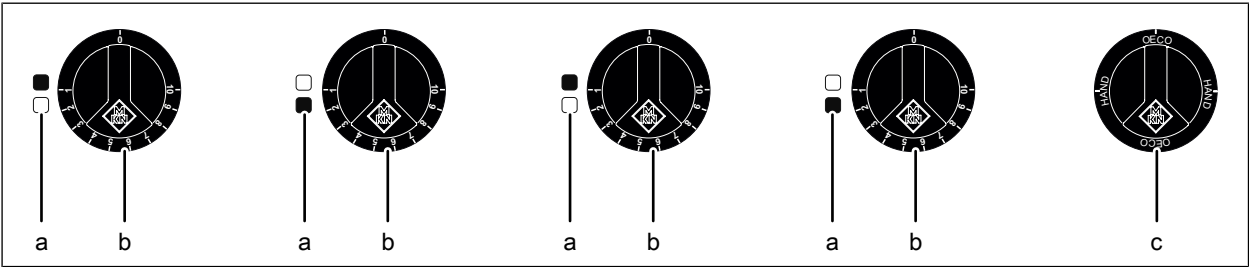


Image: Operating elements for cooker with 2 or 4 heat zones


- a Heat zone identification
- b Output control knob
- c ECO/MANUAL control knob

Baking oven

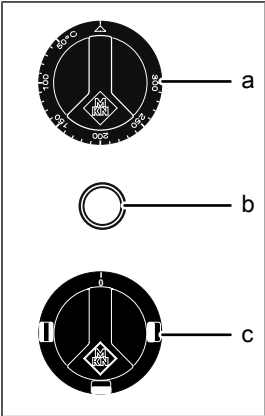

- a Temperature control knob
- b Heating indicator light
- c Heating control knob

Cooking zone door

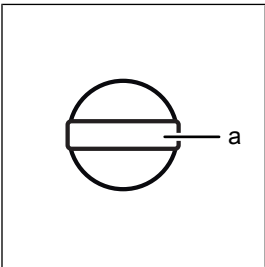

- a Extractor hood control knob

Manufacturer

MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG
Halberstädter Strasse 2a
38300 Wolfenbüttel
Germany

Phone +49 5331 89-0
Fax +49 5331 89-280
Internet www.mkn.eu

Copyright

All rights to text, graphics and pictures in this documentation are held by MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG. Distribution or duplication is only permitted with the prior written consent of MKN.

Copyright by MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG.



1 Introduction	7
1.1 About this manual	7
1.1.1 Explanation of signs	8
1.2 Intended use	9
1.3 Warranty	9
2 Safety information	10
3 Description of the unit	13
3.1 Overview of the unit	13
3.2 Function of the operating and display elements	14
3.2.1 Function of the operating and display elements for the cooker	14
3.2.2 Function of the operating and display elements for the baking oven	15
3.2.3 Function of the operating and display elements for the cooking zone door ..	15
3.3 Size of baking oven	15
4 Operating the cooker	16
4.1 Tips for use	16
4.2 Basic functions	16
4.2.1 Adjusting the output	17
4.2.2 Operation with pot detection	17
4.2.3 Operation without pot detection	17
4.3 Cooking with pot detection	18
4.4 Cooking without pot detection	19
5 Operating the baking oven	20
5.1 Tips for use	20
5.2 Switching the baking oven on and off	20
5.2.1 Switching on	20
5.2.2 Switching off	20
5.3 Basic functions	20
5.3.1 Burning in the bottom of the cooking zone	21
5.3.2 Setting the operating mode	21
5.3.3 Setting the temperature	21
5.3.4 Setting preheating	22
5.4 Baking	22
6 Pausing and end of use	24
7 Cleaning and caring for the unit	25
7.1 Preventing corrosion	25
7.2 Eliminating rust spots	26
7.3 Cleaning the housing	26
7.4 Cleaning the glass ceramic cooktop	26

7.5 Cleaning the baking oven	27
7.6 Cleaning the seal of the cooking zone door	28
7.7 Performing a visual inspection	29
8 Troubleshooting	30
8.1 Cause of failure and the remedy	30
8.1.1 Cause of failure of cooker	30
8.1.2 Cause of failure of baking oven	31
8.2 Nameplate	31
9 Carrying out maintenance	32
10 Disposing of the unit in an environmentally responsible manner	33
11 Manufacturer's declaration	34



1 Introduction

1.1 About this manual

The operating instructions are part of the unit and contain information:

- On safe operation,
- On cleaning and care,
- On remedies in case of faults.

Be aware of the following notes and adhere to them:

- Read the operating instructions completely before operating the unit for the first time.
- Make the operating instructions available to the operator at all times at the operating site of the unit.
- Insert any supplements from the manufacturer.
- Keep the operating instructions throughout the service life of the unit.
- Pass on the operating instructions to any subsequent operator of the unit.

Target group The target group of the instruction manual is the operator, who is entrusted with the operation, cleaning and care of the unit.

Figures All figures in this manual are intended as examples. Discrepancies between these and the actual unit can arise.

1.1.1 Explanation of signs



DANGER
Imminent threat of danger

Failure to comply will lead to death or very severe injuries.



WARNING
Possible threat of danger

Failure to comply can lead to death or very severe injuries.



CAUTION
Dangerous situation

Failure to comply can lead to slight or moderately severe injuries.

ATTENTION
Physical damage

Failure to comply can cause physical damage.



Notes for better understanding and operation of the unit.

Symbol / sign	Meaning
•	Listing of information.
→	Action steps, which can be performed in any sequence.
1. 2.	Action steps, which must be performed in the specified sequence.
↳	Result of an action performed or additional information about it.

1.2 Intended use

This unit is intended to be used solely for commercial purposes, particularly in commercial kitchens.

This unit may only be used with suitable accessories and for the cooking of food.

It is forbidden to use the unit for purposes, which include the following:

- Drying cloths, paper or dishes
- Heating acids, alkaline solutions or other chemicals
- Heating preserved food
- Heating flammable liquids
- Deep-frying
- Heating rooms
- Heating of warmer plates and GN containers
- Frying directly on the heat zone
- Frying directly on the bottom of the cooking zone
- Storing supplies
- As set-down area or working surface
- Using the cooking zone door as a standing or depositing surface

The use of the unit is prohibited in the following countries:

- USA
- Canada

1.3 Warranty

The warranty is void and safety is no longer assured in the event of:

- Improper conversion or technical modifications of the unit,
- Improper use,
- Incorrect startup, operation or maintenance of the unit,
- Problems resulting from failure to observe these instructions.

2 Safety information

The unit complies with applicable safety standards. Residual risks associated with operation or risks resulting from incorrect operation cannot be ruled out and are mentioned specifically in the safety instructions and warnings.

The operator must be familiar with regional regulations and observe them.

Operation During operation, the following group of individuals must be supervised by an individual who is responsible for safety:

- Individuals with physical, sensory, or mental handicaps, or who lack the knowledge and experience to operate the unit properly.

The supervising individual must be familiar with the unit and the risks associated with it.

Hot surfaces Risk of burns from hot surfaces

- Protect arms and hands by wearing suitable protective gloves.
- Do not touch heating elements, hot surfaces or accessories immediately after use.
- Allow surfaces to cool prior to cleaning.
- Open the cooking zone door only by means of the door handle.
- Do not place any pot lids or utensils on the cooking surface.
- Remove containers and baking sheets only with suitable protective gloves or potholders.

Hot liquids Risk of chemical burns from evaporating cleaners

- Follow the instructions of the cleaning agent manufacturer.
- Allow the cooking so to clean to a temperature below 60 °C and then clean.

Risk of burns from steam

- Protect arms and hands by wearing protective gloves.
- Open the extractor hood carefully.
- Do not look into the extractor hood.
- Do not hold hands in front of the extractor hood.
- First open the cooking zone door slightly and allow the steam to escape. Then open the cooking zone door completely.

Defective unit Risk of injury from a defective unit

- Disconnect a defective unit from the electric mains.
- Do not operate a defective unit.
- Allow only an authorized technician to repair the unit.

Fire prevention Risk of fire from dirt and grease deposits

- Clean the unit when finished using it.

Risk of fire from overheating

- Observe the unit during operation.
- Do not store any combustible objects or plastic containers in the cooking zone.

Firefighting

- In the event of a fire, disconnect the unit from the electric mains.
- Use a Fire Class F fire extinguisher, never water, to extinguish grease fires. Other fires, for instance, can be extinguished with fire extinguishers suitable for Fire Classes A, B, C, CO₂ fire extinguishers or extinguishing media suitable for the fire class confronted.

Unit on casters Risk of injury from a unit on casters

- Attach units with a wall side narrower than 600 mm to the wall at the installation site.
- Move the unit only for cleaning or maintenance.
- Lock casters during operation.

Risk of a line breaking if subjected to high tensile load

- Secure the unit with a chain as a strain relief for the power connection at the installation site so that no tensile load is applied to the power connection if the unit is moved.

Damaged cooking surface Risk of injury from damaged cooking surface

- Switch off a damaged unit and disconnect it from the electrical supply mains.
- Do not operate a unit with a damaged cooking surface.
- Allow only an authorized technician to repair the cooking surface.

Hot cookware Risk of property damage from hot cookware

- Do not place hot cookware on the bonded joint in the cooking surface; silicone seals will be destroyed.
- Cookware must not be allowed to overhang the edge of the cooking surface.

Improper cleaning Risk of chemical burns from cleaning agent

- Follow the instructions of the cleaning agent manufacturer.
- Take appropriate protective measures when handling aggressive cleaning agents.

Risk of falling on smooth floors

- Keep the floor in front of the unit clean and dry.

Risk of injury from improper cleaning

- Clean the cooking zone carefully. The cooking zone sensor protrudes into the cooking zone.

Risk of physical damage from improper cleaning

- Clean the unit after using it.
- Do not clean the unit with a high-pressure cleaner or water jet.
- Do not clean the housing with highly abrasive or chemically aggressive cleaning agents.
- Do not clean the housing with highly abrasive sponges.
- Follow the instructions of the cleaning agent manufacturer.
- Do not cool shock the unit by cooling it abruptly.
- Clean the cooking zone carefully. The cooking zone sensor protrudes into the cooking zone.
- Use a glass ceramic scraper to clean the cooking surface.
- Use a glass ceramic cleaner.
- Do not use any bleaching or chlorine-containing cleaners.

Hygiene Health risk from insufficient hygiene

- Observe applicable regional hygiene regulations.
- Follow the cleaning instructions.

Improper use Risk of physical damage from improper use

- Do not operate the unit outdoors.
- Use only original accessories.
- Train operators regularly.
- Do not heat food warmer plates or tins of preserved food.
- Observe the unit during operation.
- Do not place any plastic or aluminium objects on the cooking surface.
- Use only cookware that is dry outside.
- Use only appropriate and undamaged cookware.
- Remove spices, overcooked food or the like immediately.
- Do not use cookware with a rough bottom.
- Do not fry directly on the cooking zone.
- Do not fry directly on the bottom of the cooking zone.

3 Description of the unit

3.1 Overview of the unit

The unit is intended for universal use in commercial kitchens for cooking food in pots and pans on a surface. Possible uses are cooking, stewing, frying, braising, boiling and combined frying and cooking.

The frying and baking oven operates with top and bottom heating in a closed cooking zone.

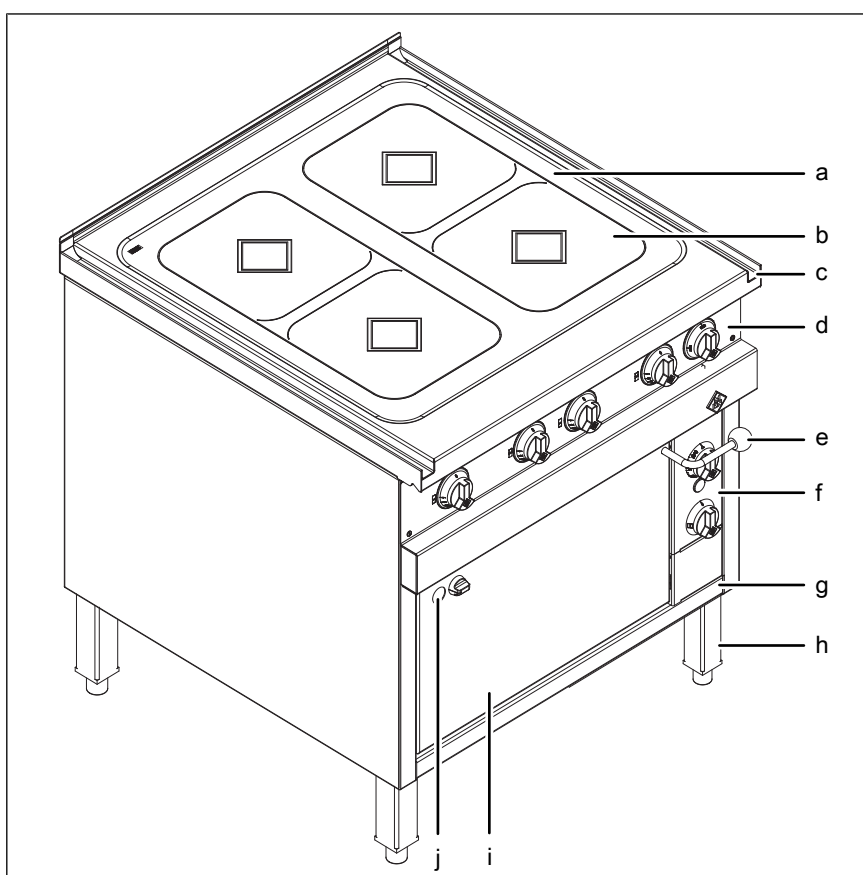


Image: Cooker with baking oven

- | | |
|-------------------------------|--------------------------------|
| a Glass ceramic cooktop | f Control panel of baking oven |
| b Heat zone | g Nameplate |
| c Discharge channel | h Equipment leg (optional) |
| d Cooker control panel | i Baking oven door |
| e Handle for baking oven door | j Extractor hood |

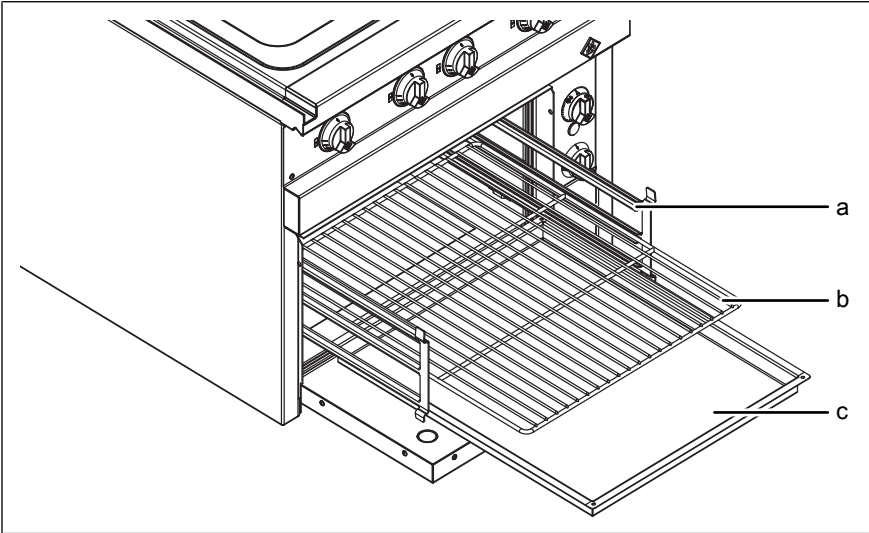


Image: Cooker with baking oven, door open

- a Slide-in rail
- b Grate
- c Baking tray

3.2 Function of the operating and display elements

3.2.1 Function of the operating and display elements for the cooker

Operating/display element	Symbol	Designation	Function
OEKO/MANUAL control knob	MANUAL	Manual	Select manual operation.
	OEKO	Oeco	Select pot detection.
Output control knob	△	Off	Switching off the heating element.
	1 — 10	Output	Set the heating element output.
Heat zone identification	□	Heat zone	Display the heat zone position.
	■		



3.2.2 Function of the operating and display elements for the baking oven

Symbol	Operating/display element	Function
"0"	<i>Heating mode</i> control knob	• Switch off the baking oven.
		• Select Top heating.
		• Select Bottom heating.
		• Select Top and bottom heating.
	<i>Temperature</i> control knob	• Switch off the heating.
50 °C — 300 °C		• Set the temperature.
	<i>Heating</i> indicator light	• Illuminates when heating is active.

3.2.3 Function of the operating and display elements for the cooking zone door

Symbol	Operating/display element	Function
	<i>Extractor hood</i> control knob	• Discharging steam

3.3 Size of baking oven



The fill quantity depends on the model.

Model (see nameplate)	Size of baking oven
OPEHEV4EB	2/1 GN
HLEHEV4EB	1½ GN
O7EHEV4EB	

4 Operating the cooker



CAUTION

Risk of burns from hot surfaces

- Protect arms and hands by wearing suitable protective gloves.
-



A hotplate corresponds to a heat zone.

4.1 Tips for use

In order to use the unit to its optimum and avoid heat loss:

- Use suitable cooking utensils.
- *OEKO* setting (with pot detection):
 - Suitable cooking utensils are those made of metal, such as for example steel, stainless steel, copper or cast iron, and they should have a flat bottom.
 - Unsuitable cooking utensils are those made of plastic, glass or ceramics.
 - Base diameter > 18 cm so that automatic pot detection is effective.
- *MANUAL* setting:
 - Suitable cooking utensils are those made of metal, such as for example steel, stainless steel, copper and cast iron, or those made of glass or ceramics, and they should have a flat bottom.
 - Unsuitable cooking utensils are those made of plastic.
 - The heat zone is completely covered.
- Match the shape and size of the cooking utensils used to the heat zone.
- Place the lid on when cooking.
- Avoid overcooking.
- Switch off heat zones that are not required.

4.2 Basic functions



CAUTION

Risk of burns from hot surfaces

- Protect arms and hands by wearing suitable protective gloves.
-

4.2.1 Adjusting the output

Requirement Unit ready for use

1. Select the heat zone.
2. Turn the *Output* control knob to the desired output level.
 - ↳ For unit with pot detection: the heat zone heats as soon as a suitable cooking utensil is placed on it.
 - ↳ For unit without pot detection: the heat zone heats immediately and permanently.

4.2.2 Operation with pot detection



The base diameter of the cooking utensil must be at least 18 cm if used with automatic pot detection.



Pot detection only reacts to a metal cooking utensil.



If power has been interrupted, remove the cooking utensil from the heat zone for about 5 seconds in order to activate pot detection again.

Requirement Unit ready for use

- Set the *OECO/MANUAL* control knob to *OECO*.
- ↳ Pot detection is active.



The built-in temperature monitor protects the heat zone against overheating by automatically reducing the heat output.

The temperature monitor is not a substitute for energy-conscious use of the unit.

4.2.3 Operation without pot detection



If pot detection is not active, non-metallic cooking utensils can also be used.

Requirement Unit ready for use

- Set the *OECO/MANUAL* control knob to *MANUAL*.
- ↳ Pot detection is not active.

4.3 Cooking with pot detection



CAUTION

Risk of scalding from hot steam or hot food being cooked

Scalding from hot escaping steam or hot food being cooked can occur, when cooking utensils are being opened, closed or moved.

- Cooking utensils must be carefully opened, closed and moved.



After the cooking utensil has been removed, the heat zone continues to heat for about 10 seconds at the set output. Then the heat zone switches off automatically.



If power has been interrupted, remove the cooking utensil from the heat zone for about 5 seconds in order to activate pot detection again.

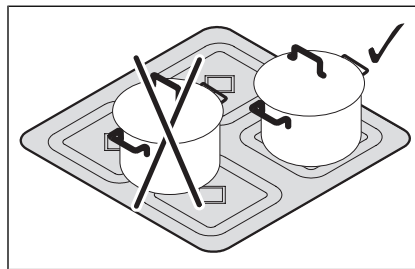


Image: Glass ceramic cooktop with cooking utensil

Requirement Unit ready for use

Suitable cooking utensil provided

1. Switch on the pot detection (see "Basic functions").
2. Set the output (see "Basic functions").
3. Place the cooking utensil in the middle of the heat zone.
 - ↳ Distribute a larger cooking utensil evenly over several heat zones.
 - ↳ The heat zone heats up at the selected output level.
 - ↳ The cooking utensil is heated.
4. Depending on the desired cooking mode, continue with the cooking of the food.
 - ↳ Reduce the output if required.
5. Remove the cooking utensil from the heat zone.
 - ↳ The heat zone switches off automatically.
 - ↳ The heat zone cools down.
 - ↳ The cooking utensil cools down.
6. Switch off the pot detection (see "Basic functions").

4.4 Cooking without pot detection



CAUTION

Risk of scalding from hot steam or hot food being cooked

Scalding from hot escaping steam or hot food being cooked can occur, when cooking utensils are being opened, closed or moved.

- Cooking utensils must be carefully opened, closed and moved.



After the cooking utensil has been removed, the heat zone heats permanently at the set output.

Requirement Unit ready for use

Suitable cooking utensil provided

Pot detection switched off

1. Set the output (see "Basic functions").
2. Place the cooking utensil in the middle of the heat zone.
 - ↳ Distribute a larger cooking utensil evenly over several heat zones.
 - ↳ The heat zone heats up at the selected output level.
 - ↳ The cooking utensil is heated.
3. Depending on the desired cooking mode, continue with the cooking of the food.
 - ↳ Reduce the output if required.
4. Set the *Output* control knob to "△".
 - ↳ The heat zone cools down.
5. Remove the cooking utensil from the heat zone.

5 Operating the baking oven



CAUTION

Risk of burns from hot surfaces

- Protect arms and hands by wearing suitable protective gloves.

5.1 Tips for use

In order to use the unit to its optimum and avoid heat loss:

- Use suitable cooking utensils.
 - Suitable cooking utensils are resistant to deformation and abrasion caused by the effect of heat.
 - Suitable cooking utensils are those made of metal, such as for example steel, stainless steel, copper or cast iron.
 - Suitable cooking utensils are those made of heat-resistant glass or special ceramics (usually glazed).
 - Unsuitable cooking utensils are those made of plastic.
- Use residual heat by switching off early.

5.2 Switching the baking oven on and off

5.2.1 Switching on

Requirement Unit ready for use

1. Turn the *Temperature* control knob to the desired temperature.
 2. Turn the *Heating mode* control knob to the desired heating mode.
- ↳ The oven is now on.
- ↳ The baking oven heats up to the selected temperature.

5.2.2 Switching off

1. Turn the *Temperature* control knob to "△".
 2. Turn the *Heating mode* control knob to "0".
- ↳ The baking oven is now off.
- ↳ Unit cools down.

5.3 Basic functions

The following work must be carried out before the initial commissioning:

- Burn in the bottom of the cooking zone.

5.3.1 Burning in the bottom of the cooking zone



Heat the baking oven to full load during the initial commissioning in order to eliminate unpleasant smells.



Smoke can develop when particles are incinerated on the heat zone or in the cooking zone of the baking oven.

- Ventilate the room well.



The blue coloration is a protective layer made of iron oxide.

Requirement Unit ready for use

Baking tray and grate removed from the cooking zone

1. Turn the *Heating mode* control knob to "Top heating and bottom heating".
2. Set the *Temperature* control knob to "300 °C".
 - ↳ The baking oven heats up.
3. Heat the baking oven for approximately 10 minutes.
 - ↳ Maximum heating produces a bluish discoloration of the bottom.
4. Turn the *Temperature* control knob to the "0" position.
5. Turn the *Heating mode* control knob to the "0" position.
 - ↳ The baking oven cools down.
6. Clean the baking oven (see "Cleaning the unit").
 - ↳ The baking oven is ready.

5.3.2 Setting the operating mode

Requirement Unit ready for use

→ Set the *Heating mode* control knob to the desired heating mode.

5.3.3 Setting the temperature



CAUTION

Risk of scalding from hot steam or hot food being cooked

Scalding from hot escaping steam or hot food being cooked can occur, when cooking utensils are being opened, closed or moved.

- Cooking utensils must be carefully opened, closed and moved.

→ Set the *temperature* control knob to the desired temperature.

↳ The *heating* indicator light illuminates.

↳ The *heating* indicator light goes out when the set temperature is reached.

5.3.4 Setting preheating

The correct temperature is important for the different cooking modes of baking.

Requirement Unit ready for use

1. Set the *Heating mode* control knob to the desired heating mode.
 2. Set the *Temperature* control knob to the desired temperature.
 - ↳ The *Heating* indicator light illuminates.
 - ↳ The unit heats up.
 - ↳ Once the set temperature is reached, heating switches off.
 - ↳ The *Heating* indicator light goes out.
- ↳ The unit is preheated.

5.4 Baking



CAUTION

Risk of burns from hot surfaces

- Protect arms and hands by wearing suitable protective gloves.
-



Leave the cooking zone door closed during baking.

If the temperature in the cooking zone drops below the selected temperature, the baking oven heats up again automatically.

Steam is generated when the food being cooked contains a large amount of water. It can be removed from the cooking zone by opening the extractor hood.

If the food being cooked requires a moist climate, e.g. bread, place a heat-resistant dish with water in the cooking zone.

Requirement The unit is on

1. Prepare the food to be cooked on a baking tray, grate or suitable cooking utensil.
2. Preheat the baking oven (see "Basic functions").
3. Open the cooking zone door.
4. Push the baking tray or grate into the slide-in rails.
 - ↳ Put a suitable cooking utensil onto the grate and push it into the slide-in rails.
5. Close the cooking zone door.
6. Steam arising during the cooking time can be discharged from the baking oven.
7. Open the extractor hood with the *Extractor hood* control knob.
 - ↳ The steam escapes.
8. Open the cooking zone door.

9. If necessary, carry out sampling before baking is ended.
 - ↳ Close the cooking zone door and continue to cook the food as required.
10. Switch off the baking oven (see "Switching the unit on and off").
11. Remove the food being cooked.
12. Remove the baking tray or grate.
13. Close the cooking zone door.
14. Clean the unit (see "Cleaning and caring for the unit").

6 Pausing and end of use

Switch off the unit during pauses and at end of use.

7 Cleaning and caring for the unit

**CAUTION****Risk of burns from hot surfaces**

- Allow surfaces to cool prior to cleaning.

ATTENTION**Risk of physical damage from extremely abrupt cooling**

- Do not cool shock the unit by cooling it abruptly.

ATTENTION**Risk of physical damage from improper cleaning**

- Do not clean the unit with a high-pressure cleaner or water jet.

ATTENTION**Risk of physical damage through penetration of water**

- Do not close the discharge channel and do not fill with water.

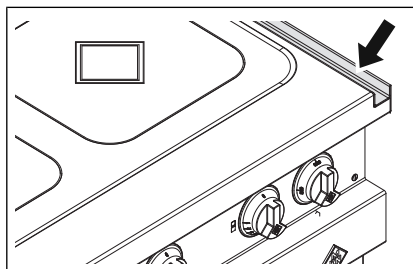


Image: Discharge channel

7.1 Preventing corrosion

- Keep the surfaces of the unit clean and with access to air.
- Remove lime, grease, starch and protein deposits from the surfaces of the unit.
- Remove salt accumulations.
- Only expose parts made from non-rusting steel to brief contact with highly acidic foods, spices, salts or the like.
- Avoid damaging the stainless steel surface with other metal items, such as for example steel spatulas or steel wire brushes.
- Avoid contact with iron and steel, such as for example steel wool and steel spatulas.
- Do not use bleaching or chlorine-containing cleaning agents.
- Clean the contact surfaces with water.

7.2 Eliminating rust spots

- Remove fresh rust spots with a mild abrasive or fine sandpaper.
- Always remove rust spots completely.
- Expose treated areas to fresh air for at least 24 hours. During this time, do not allow any contact with greases, oils or foods so that a new protective layer can form.

7.3 Cleaning the housing

ATTENTION

Risk of physical damage from improper cleaning

- Do not clean the housing with highly abrasive or chemically aggressive cleaning agents.
 - Do not clean the housing with highly abrasive sponges.
-

Requirement Unit switched off and cooled down

→ Clean the housing with warm water and commercially available washing-up liquid.

7.4 Cleaning the glass ceramic cooktop



CAUTION

Risk of burns from hot surfaces

- Allow surfaces to cool prior to cleaning.
-

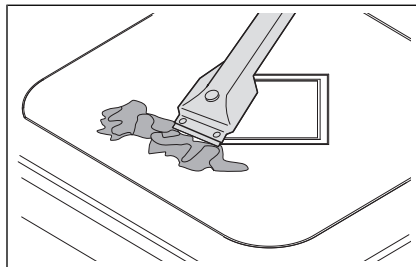


Image: Glass ceramic cooktop with glass scraper

Requirement Unit switched off
Cooktop cooled down

1. Wipe off light contamination with a damp cloth.
2. Remove heavy contamination with a commercially available glass ceramic cleaner.
3. Remove encrusted material with a glass scraper.
4. Clean the cooktop with warm water and commercially available cleaners.
5. Wipe dry with a lint-free cloth.

7.5 Cleaning the baking oven



CAUTION

Risk of burns from hot surfaces

- Allow surfaces to cool prior to cleaning.



CAUTION

Risk of injury from improper cleaning

- Clean the cooking zone carefully, since the temperature sensor protrudes into the cooking zone.



CAUTION

Risk of chemical burns from cleaning agent

- Follow the instructions of the cleaning agent manufacturer.
- Take appropriate protective measures when handling aggressive cleaning agents.

ATTENTION

Risk of physical damage from improper cleaning

- Do not clean the unit with a high-pressure cleaner or water jet.

ATTENTION

Risk of physical damage from improper cleaning

- Be sure not to damage the temperature sensor during cleaning.

ATTENTION

Risk of physical damage from improper cleaning

Animal fats in combination with high temperatures can damage the door seal very quickly if it is not maintained properly.

- Clean the door seal regularly.
- Do not use aggressive cleaners.



Dry the baking oven by heating it briefly.



The bottom of the cooking zone can turn a dark blue during operation. Do not remove the oxide layer. It provides additional corrosion protection.

Requirement Unit switched off and cooled down

Baking oven cooled down

1. Open the cooking zone door.
2. Remove the cooking utensils from the cooking zone.
3. Remove the baking tray and grate from the cooking zone.
4. Unhook the slide-in rail by lifting it upwards out of the support eyes.
5. Clean the cooking zone, slide-in rail, baking tray and grate with warm water and a commercially available cleaning agent.
6. Clean the door seal and remove grease with a mild soap solution.
7. Rinse thoroughly with clear water to neutralise cleaners.
8. Wipe dry with a lint-free cloth.
9. Hook the slide-in rail into the support eyes.
10. Push the baking tray and grate into the slide-in rail.
11. Close the cooking zone door.
12. Switch on the baking oven (see "Switching the baking oven on and off").
13. Heat the baking oven for approximately 5 minutes.
↳ The cooking zone dries.
14. Switch off the baking oven (see "Switching the unit on and off").

Tip

In order to care for the rust protection, or if it has been worn away, apply a special care product or thin oil film.

7.6 Cleaning the seal of the cooking zone door



CAUTION

Risk of burns from hot surfaces

- Allow surfaces to cool prior to cleaning.
-

ATTENTION

Risk of physical damage from improper cleaning

Animal fats in combination with high temperatures can damage the door seal very quickly if it is not maintained properly.

- Clean the door seal regularly.
 - Do not use aggressive cleaners.
-



If the unit is used primarily for roasting, also clean the door seal during pauses in use.

Requirement Unit switched off and cooled down

1. Open the cooking zone door.
2. Clean the door seal with warm water and a commercially available detergent.
3. Rinse thoroughly with clear water to neutralise cleaners.
4. Wipe dry with a lint-free cloth.

7.7 Performing a visual inspection

ATTENTION

Risk of physical damage from improper inspection

- Have inspections performed by a proficient operator.
 - In the event of damage or signs of wear, contact Customer service immediately and do not operate the unit any longer.
-

Inspect the unit, operating elements, hotplates and baking oven for visible damage.

Requirement Unit switched off and cooled down

→ Inspect the housing, hotplates, baking oven, slide-in rails, baking trays and cooking zone door at regular intervals for deformation and damage.

↳ Visual inspection has been performed.

8 Troubleshooting

8.1 Cause of failure and the remedy

8.1.1 Cause of failure of cooker

Failure	Possible causes	Remedy
Operating element does not react	The <i>Output</i> control knob is defective	• Disconnect the unit from the electric mains. • Contact Customer service.
	The <i>OECO/MANUAL</i> control knob is defective	• Disconnect the unit from the electric mains. • Contact Customer service.
The unit does not heat up: The <i>OECO/MANUAL</i> control knob is on <i>MANUAL</i> and pot detection is not active	<i>Output</i> control knob on setting "△"	• Set the output.
	Power supply interrupted	• Connect the unit to the electric mains. • Check the fuses. • Notify Customer service.
	The electronics are defective	• Disconnect the unit from the electric mains. • Notify Customer service.
	Unit defective	• Disconnect the unit from the electric mains. • Notify Customer service.
The cooking utensil does not heat up	Unsuitable cooking utensil used	• Use suitable cooking utensils.
The unit does not heat up: The <i>OECO/MANUAL</i> control knob is on <i>OECO</i> and pot detection is active	<i>Output</i> control knob on setting "△"	• Set the output.
	The electronics are defective	• Disconnect the unit from the electric mains. • Notify Customer service.
	Unit defective	• Disconnect the unit from the electric mains. • Notify Customer service.
The cooking utensil does not heat up	The <i>pot base</i> diameter of the cooking utensil is < 18 cm	• Use suitable cooking utensils.
	Unsuitable cooking utensil used	• Use suitable cooking utensils.
Insufficient heat output	Unit defective	• Disconnect the unit from the electric mains. • Notify Customer service.
	Overheating protection has triggered	• Set the output. • Allow the unit to cool down.

8.1.2 Cause of failure of baking oven

Failure	Possible causes	Remedy
The unit does not heat up	The unit is switched off	• Switch on the unit.
	<i>Temperature</i> control knob in "△" position	• Set the temperature.
	Power supply interrupted	• Contact the authorized technical personnel.
	<i>Temperature</i> control knob or heating element is defective	• Disconnect the unit from the electric mains. • Notify Customer service.
Insufficient heat output	<i>Temperature</i> control knob or heating element is defective	• Disconnect the unit from the electric mains. • Notify Customer service.
	Mains phase missing	• Contact technical personnel.
The <i>Heating</i> indicator light does not illuminate	The <i>Heating</i> indicator light is defective	• Disconnect the unit from the electric mains. • Contact the authorized technical personnel.

8.2 Nameplate

When contacting Customer service, please always provide the following data from the nameplate:

Serial number (SN)	
Type number (TYP)	

9 Carrying out maintenance

The unit is maintenance-free, there are no maintenance requirements.

10 Disposing of the unit in an environmentally responsible manner

Do not dispose of unit or the unit's components together with non-recyclable waste. If the unit is disposed of together with non-recyclable waste or treated improperly, toxic substances contained in the unit can damage health and pollute the environment.

Dispose of the unit in accordance with local regulations for used appliances. Clarify any open questions with the responsible agencies (for instance, solid waste management).

Unit In addition to valuable materials, used electrical and electronic equipment also contains harmful substances that were needed for their operation and safety.

Cleaning agents Dispose of leftover cleaning agents and cleaning agent containers in accordance with the information provided by the cleaning agent's manufacturer. Observe applicable regional regulations.

11 Manufacturer's declaration



EC Declaration of Conformity



Manufacturer

MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG • Halberstädter Straße 2a • 38300 Wolfenbüttel, Germany

We hereby declare, that the following product:

Description of the unit			
Unit for cooking food in commercial applications			
Unit type			
Vitro electric cooker with electric baking oven			
Unit number			
1323403	2023406	2123403	

complies with the relevant provisions of the following directives, but does not contain any assurance of properties:

- Directive 2011/65/EU (RoHS) dated 01 July 2011
- Directive 2014/30/EU dated 26 February 2014 on electromagnetic compatibility
- Directive 2014/35/EU dated 26 February 2014 on electrical equipment used within certain voltage limits

Adduced basis for verification	
EN ISO 12100:2010	
DIN EN 55014-1:2012-05	
EN 60335-1:2012	
EN 55014-2:2015	
EN 60335-2-36:2002/A11:2012	

The manufacturer bears the sole responsibility for issuing this Declaration of Conformity. This Declaration of Conformity becomes invalid, if changes are made which are not agreed with us.

Translation from the original document • 2023406--0KODE--

Wolfenbüttel, 19/09/2022

Person authorised to compile the technical documents:

ppa. Peter Helm

ppa. Peter Helm, Chief Technical Officer (address as manufacturer)





Declaration of Conformity



Manufacturer

MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG • Halberstädter Straße 2a • 38300 Wolfenbüttel, Germany

We hereby declare, that the following product:

Description of the unit			
Unit for cooking food in commercial applications			
Unit type			
Vitro electric cooker with electric baking oven			
Type number			
1323403	2023406	2123403	

complies with all relevant provisions of the following Directives and Regulations. Furthermore, this declaration does not contain any assurance of characteristics or properties.

- Directive 2011/65/EU (RoHS) dated 08 June 2011
- Electromagnetic Compatibility Regulations 2016
- Electrical Equipment (Safety) Regulations 2016

Adduced basis for verification	
EN ISO 12100:2010	
BS EN 55014-1 + A11:2017-05	
EN 60335-1:2012	
EN 55014-2:2015	
EN 60335-2-36:2002/A11:2012	

The manufacturer bears the sole responsibility for issuing this Declaration of Conformity. This Declaration of Conformity becomes invalid, if changes are made which are not agreed with us.

Wolfenbüttel, 01/09/2022

Person authorised to compile the technical documents:

ppa. Peter Helm, Chief Technical Officer (address as manufacturer)

1 / 1

2023406--0KOB--UKCA en-GB





Declaration of Conformity



Manufacturer

MKN Maschinenfabrik Kurt Neubauer GmbH & Co. KG • Halberstädter Straße 2a • 38300 Wolfenbüttel, Germany

We hereby declare, that the following product:

Description of the unit			
Unit for cooking food in commercial applications			
Unit type			
Vitro electric cooker with electric baking oven			
Type number			
1323403	2023406	2123403	

complies with all relevant provisions of the following Directives and Regulations. Furthermore, this declaration does not contain any assurance of characteristics or properties.

- Directive 2011/65/EU (RoHS) dated 08 June 2011
- Electromagnetic Compatibility Regulations 2016
- Electrical Equipment (Safety) Regulations 2016

Adduced basis for verification	
EN ISO 12100:2010	
BS EN 55014-1 + A11:2017-05	
EN 60335-1:2012	
EN 55014-2:2015	
EN 60335-2-36:2002/A11:2012	

The manufacturer bears the sole responsibility for issuing this Declaration of Conformity. This Declaration of Conformity becomes invalid, if changes are made which are not agreed with us.

Wolfenbüttel, 01/09/2022

Person authorised to compile the technical documents:

ppa. Peter Helm, Chief Technical Officer (address as manufacturer)

1 / 1

2023406--0KOB--UKNI en-GB



www.mkn.com

