


DESCRIPTION

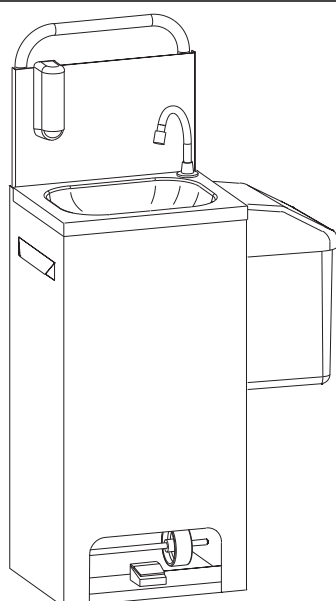


- Made of food quality stainless steel with bowl 415 x 315 depth 115 mm.
- Tubular stainless steel handle, diameter Ø25 mm.
- Fixed wheels Ø125 mm
- Stainless steel splash back.
- Goose neck tap
- Foot-operated control: electric pump powered by 2 x 6 V batteries, i.e. 12 V, batteries supplied.
- 2 jerrycans (clean water and waste water)
- Soap dispenser (capacity 25 cl).
- Paper towel dispenser (1 roll supplied)
- Hook-on waste bin
- Reference 80.651.7

1st time USE

Before the first time use, all the components must be installed:

- Take off the lids from the jerrycans and place them in the housing provided for this purpose (having filled up the can meant for the supply beforehand).
- Open the box containing the batteries for the pump in order to remove the plastic packaging and install the batteries.

- Insert the pump inside the jerrycan for the supply and connect the discharge to the other jerrycan (see drawings)
- Hook the bin on the right hand side.
- Lastly position the roll of paper supplied.

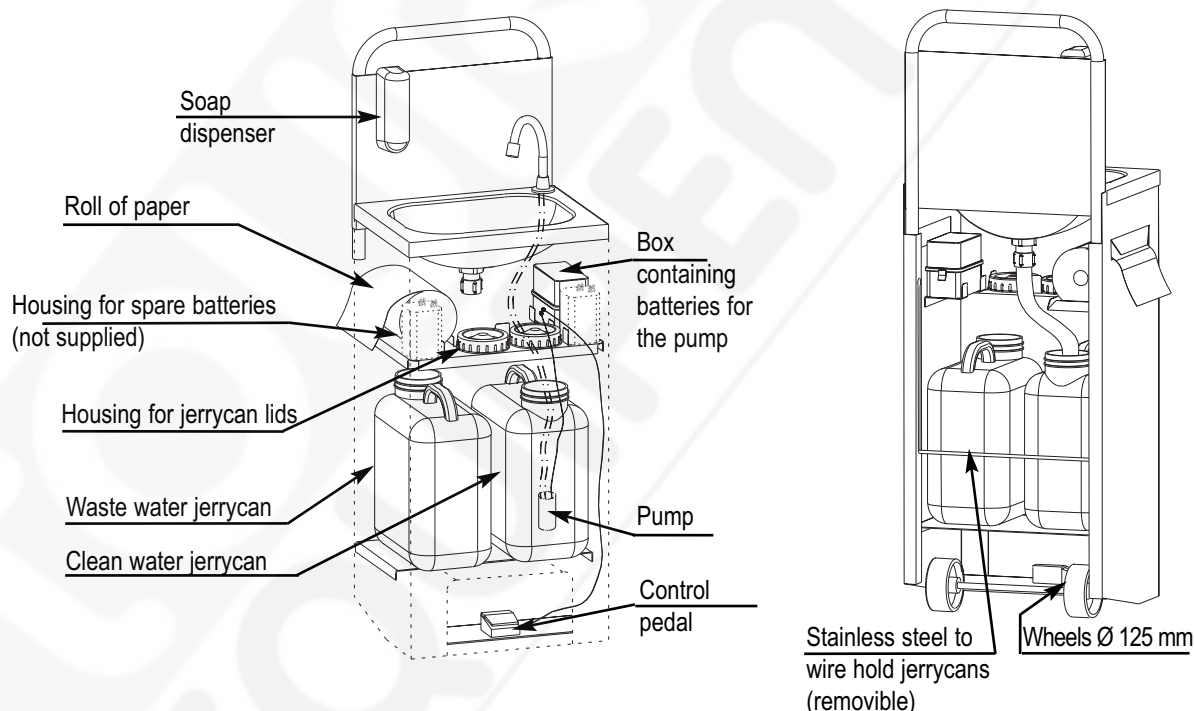

SPARE PARTS

- | | | | |
|---------------------|-----------|-------------------------|-----------|
| • 12 litre bin | : 230 087 | • Soap pump | : 230 202 |
| • 13 litre jerrycan | : 230 354 | • Paper towel dispenser | : 806 366 |
| • Electric pump | : 230 375 | • 6 V battery | : 292 144 |

MAINTENANCE - CLEANING

- The wash basin should be cleaned regularly using normal cleaning products which comply with hygiene rules. Abrasive products are not to be used. Do not use chlorinated products (bleach for example) and rinse well after cleaning. It is recommended that gloves are worn while cleaning.

This document is not binding. The specifications given are subject to change with a view to improvement.

TOURNUS EQUIPEMENT - 25 avenue Jean Moulin - B.P.59
F-71 700 TOURNUS - Phone +33 (0)3 85 27 42 42 - Fax +33 (0)3 85 27 42 99